



Enduring Experience

PR5 PARTS CATALOGUE 250

February 2011 - 2nd Edition

Preface

Whenever you need to replace AJP motorcycles parts, always use AJP original parts to insure your safety and keep motorcycle performance.

Catalogue consultation instructions

4. Dimensions

Dimensions of the parts in this catalogue are in millimetres, except when specified otherwise.

5. Abbreviations

Abbreviations used in this catalogue are:

- EN – ENDURO version
- SM – SUPERMOTO version
- RH – Right hand
- LH – Left hand
- assy - assembly
- Z – nr of teeth

6. Standard parts

The standard parts that are used such as bolts and screws, nuts, washers and circlips are identified by theirs DIN norm, followed by their dimensions, p.e.:

- Screw DIN 912 M6 x 35,

means that the screw corresponds to the DIN 912 norm and its dimensions are M6 x 35 mm.

1. Notice concerning modifications

When AJP/MOTOS decides to introduce a modification, it will be send a notification concerning the modification, without be necessary to proceed to a previous warning or other obligation.

2. Serial number


This catalogue is applicable from the serial number:

- TX9PR50**00060001


3. Notes

The drawings that are presented are only for support a quick identification of the parts, they cannot be used to parts assembling.


PL01EN – CYLINDER HEAD COVER

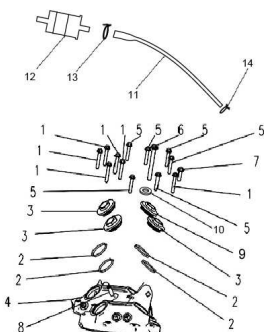


PL02EN – MIXING AIR ASSEMBLY

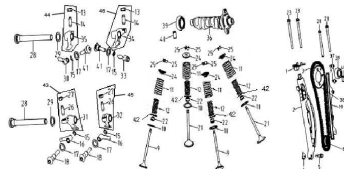


PL03EN – MIXING AIR ASSEMBLY

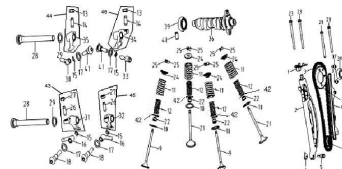


PL04EN –CYLINDER HEAD

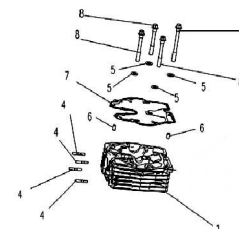


PL05EN - CYLINDER

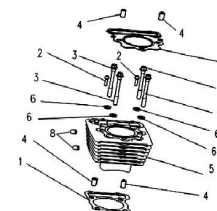


PL06EN – LEFT CRANKCASE COVER

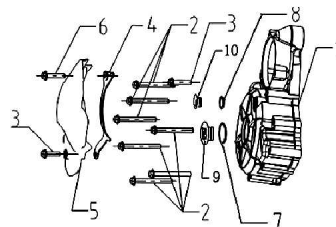


PL07EN – IGNITION ASSEMBLY

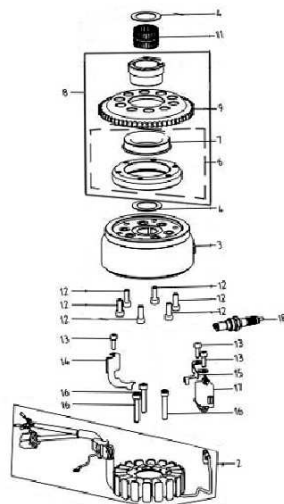


PL08EN – LEFT CRANKCASE










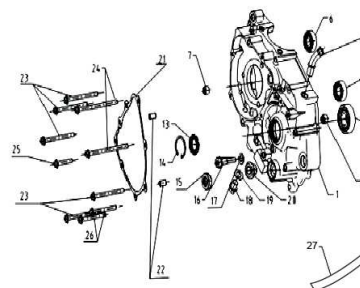


PL09EN – RIGHT CRANKCASE










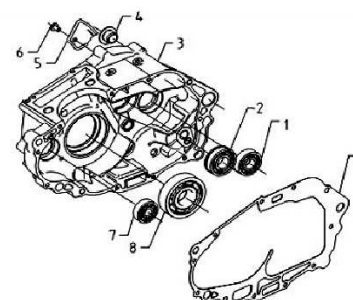






PL10EN – CRANKCASE SHAFT /
BALANCESHAFT

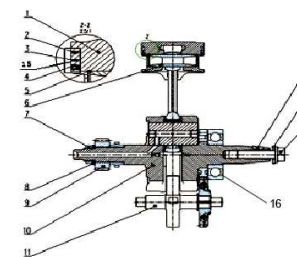


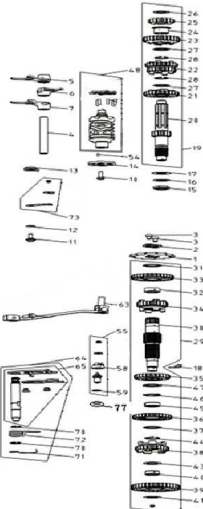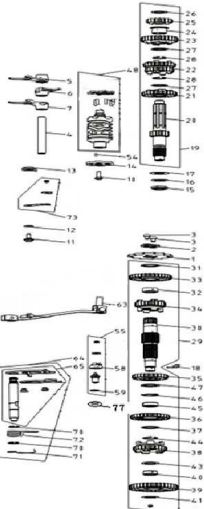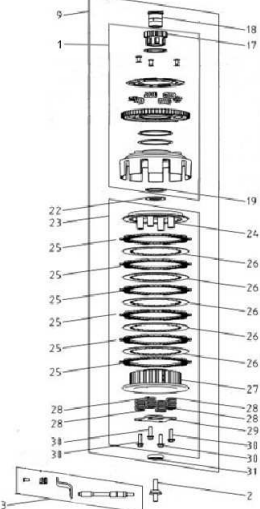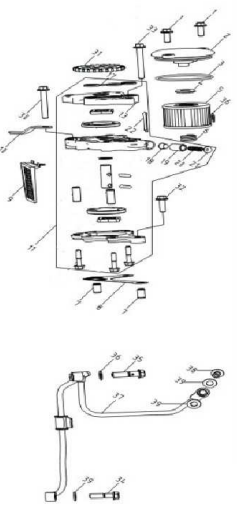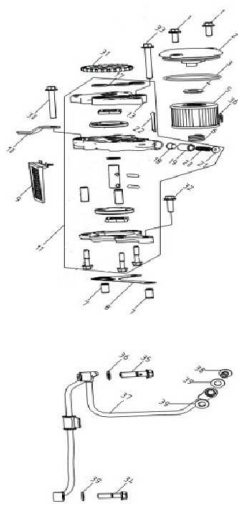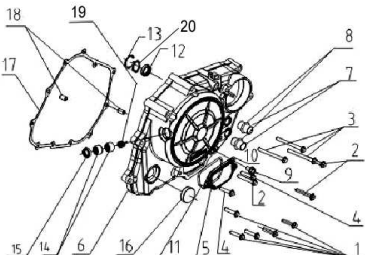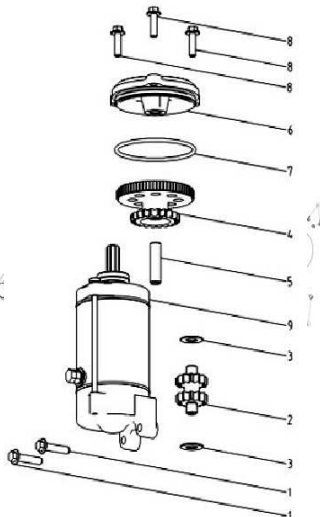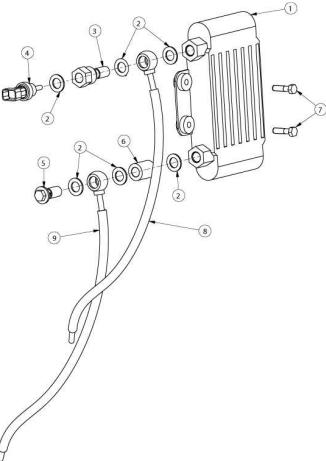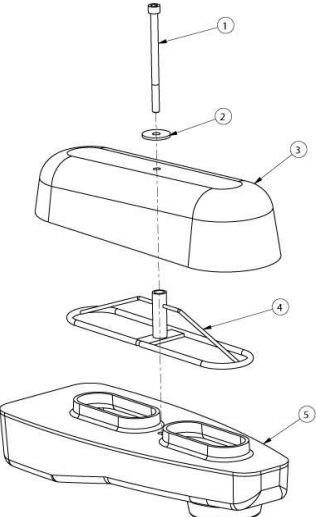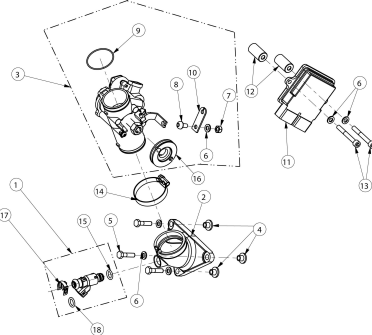PL11EN – GEARING ASSEMBLY 	PL12EN – GEARING ASSEMBLY 	PL13EN – CLUTCH ASSEMBLY 	PL14EN – LUBRICATE ASSEMBLY 	PL15EN - LUBRICATE ASSEMBLY 
PL16EN – RIGHT CRANKCASE COVER 	PL17EN – START MOTOR 	PL18EN – OIL COOLER 	PL19EN – AIR FILTER 	PL20EN – INJECTION SYSTEM 

PL21EN – FUEL TANK	PL22EN - MUFFLER	PL23EN - FRAME	PL24EN – STAND / FOOTPEG	PL25EN – REAR SWING ARM
PL26EN – REAR CUSHION LEVER	PL27EN – REAR SHOCK ABSORBER	PL28EN – FRONT SUSPENSION	PL29EN – FRONT WHEEL	PL30EN – REAR WHEEL

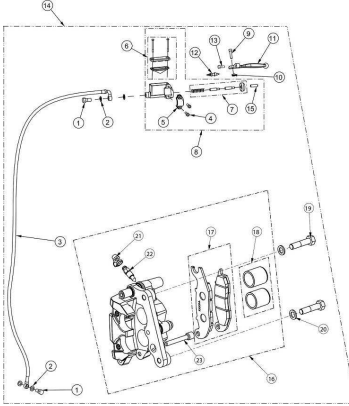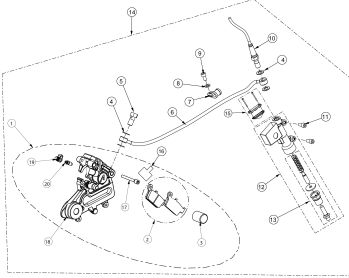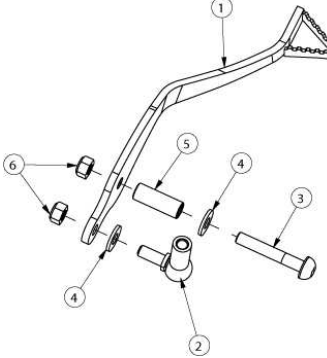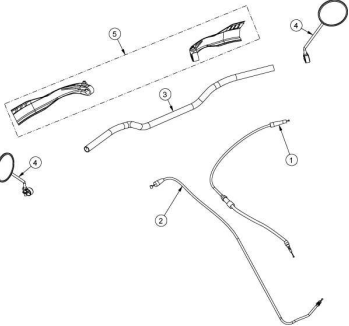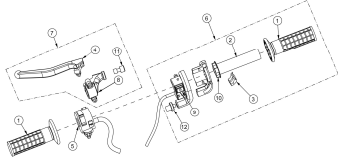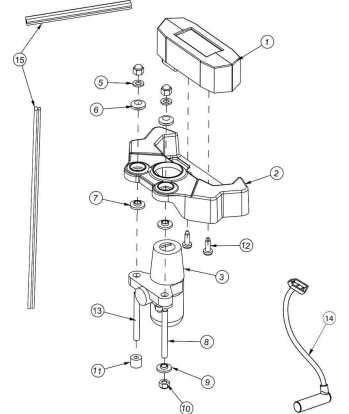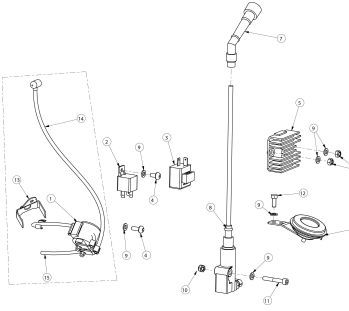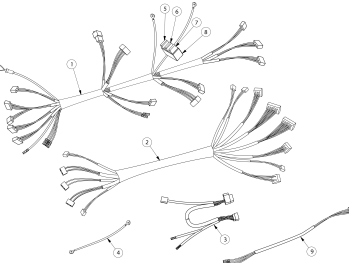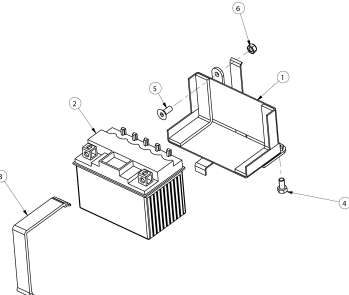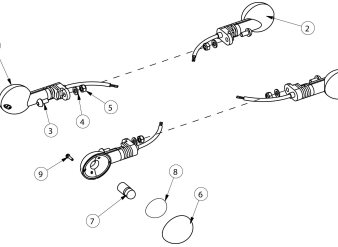PL31EN – FRONT MASTER CYLINDER 	PL32EN – REAR BRAKE 	PL33EN – REAR BRAKE PEDAL 	PL34EN - HANDLEBAR 	PL35EN – MAIN CONTROLS 
PL36EN - COCKPIT 	PL37EN – ELECTRICAL SYSTEM 	PL38EN – WIRING HARNESS 	PL39EN - BATTERY 	PL40EN – TURN SIGNAL 

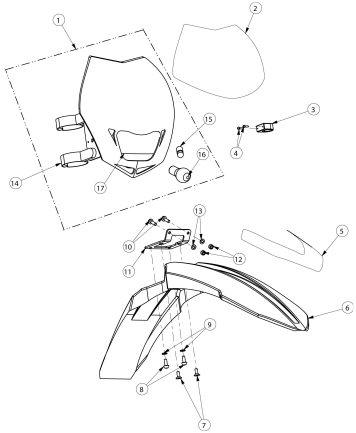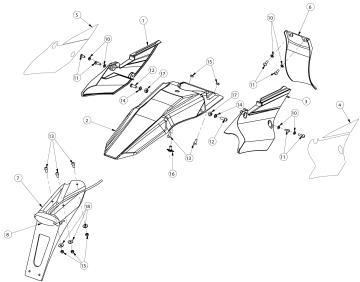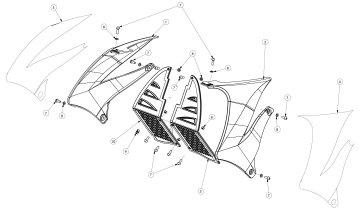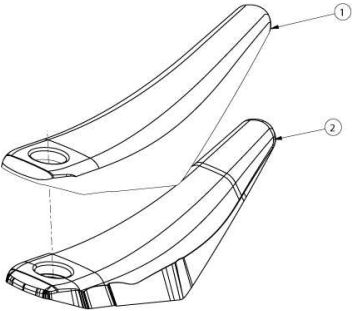PL41EN – FRONT PLASTICS 	PLL42EN – REAR FENDER 	PL43EN – FRAME COVER 	PL44EN - SEAT 	

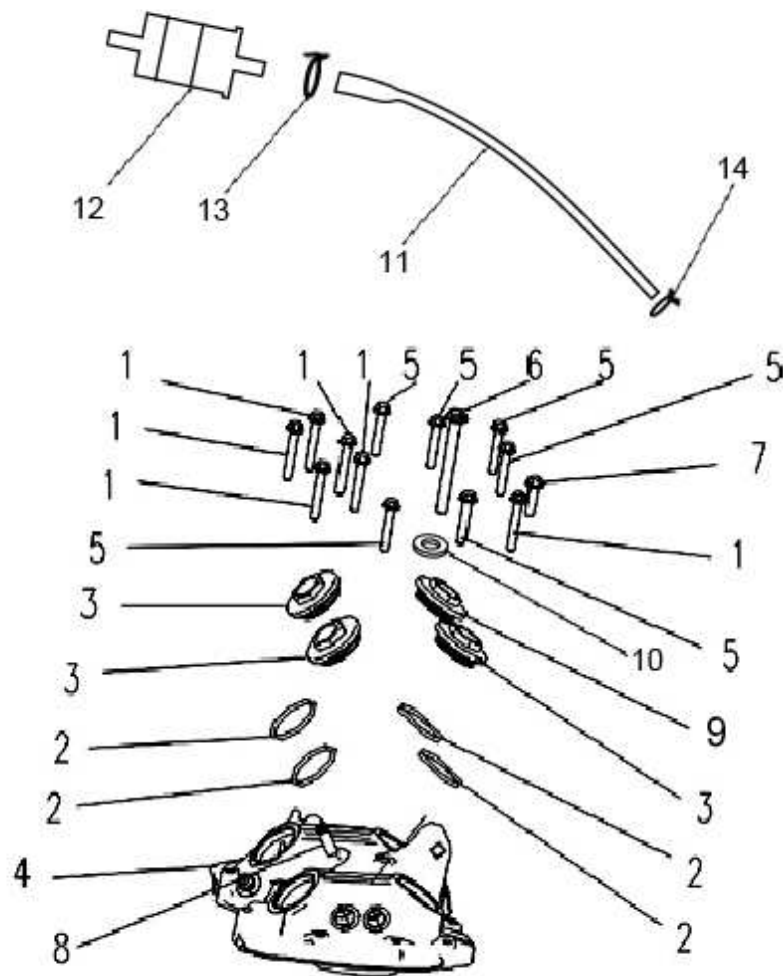

		PARTS LIST		Ref:	PL01EN
				Model:	PR5
		CYLINDER HEAD COVER		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	127301000100	FLANGE BOLT M6X40			6
2	127301000110	O-RING 36X3.2			4
3	127301000120	VALVE NUT CAP			3
4	127301050000	CYLINDER COVER LID			1
5	127301000140	FLANGE BOLT M6X35			5
6	127301000150	FLANGE BOLT M6X75			1
7	127301000160	FLANGE BOLT M6X25			1
8	127301050020	DOWN PIN			1
9	00MTS01A0065	“OIL” VALVE CAP			1
10	11007-I006-0000	CYLINDER HEAD BOLT WASHER (8X18X2)			2
11	00MTS01A0083	CYLINDER HEAD BREATHER PIPE (10x5x300)			1
12	00MTS01A0082	ENGINE BREATHER PIPE			1
13	00DES01A0019	BREATHER FILTER CLAMP 10mm			1
14	00MTS01A0014	FILTER CLAMP			1





PARTS LIST

Ref: PL02EN
Model: PR5
Date: February 2011
Edition: 2nd

MIXING AIR ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	Qt.
1	127301010000	TENSIONER PLATE	1
2	127304020000	TENSIONER COMPLEX	1
3	127304030000	TIMING CHAIN	1
4	127304000010	BEARING FIXING PLATE	1
5	127304000020	LONGER BOLT M6X13	1
6	127304000030	TIMING CHAIN WHEEL	1
9	127304000060	INLET VALVE	2
10	127304000070	VALVE SPRING LOWER BASE (17.2X24X1)	4
11	127304000080	EXTERIOR VALVE SPRING (24X43X17)	4
12	127304000090	INTERIOR VALVE SPRING (16.5X42.5X12)	4
13	127304000100	LOCK TIGHT NUT (M8)	1
14	127304000110	EXHAUST CLEARANCE ADJUSTING BOLT(M8X0.75)	1
15	127304000120	WASHER AUXILIAR ROCKET (8.3X13X1)	4
16	127304000130	AUXILIAR INLET DOOR ROCKER (IN)	2
17	127304000140	COPPER WASHER (12.3X18.6X2)	4
18	127304000150	INLET DOOR ROCKER SHAFT	2
19	127304040000	GUIDE PLATE ASSEMBLY	1
20	127304000160	FLANGE BOLT M6X80	2
21	127304000170	EXHAUST VALVE	2

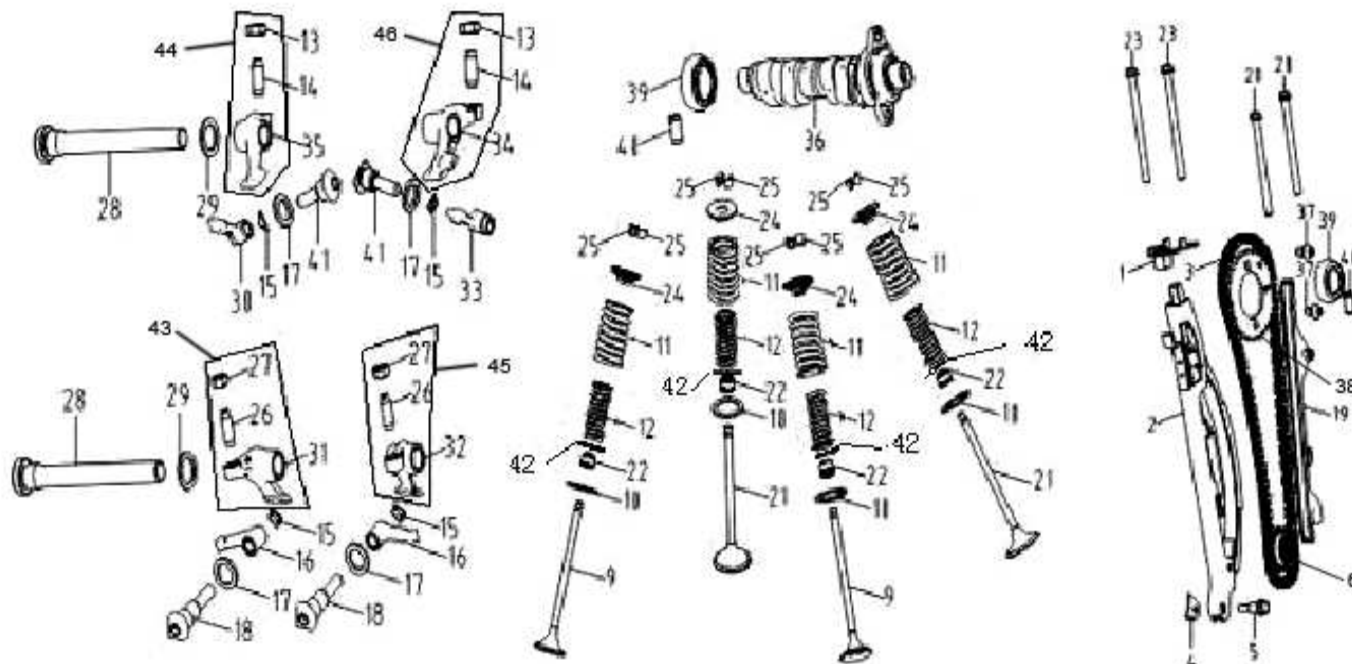

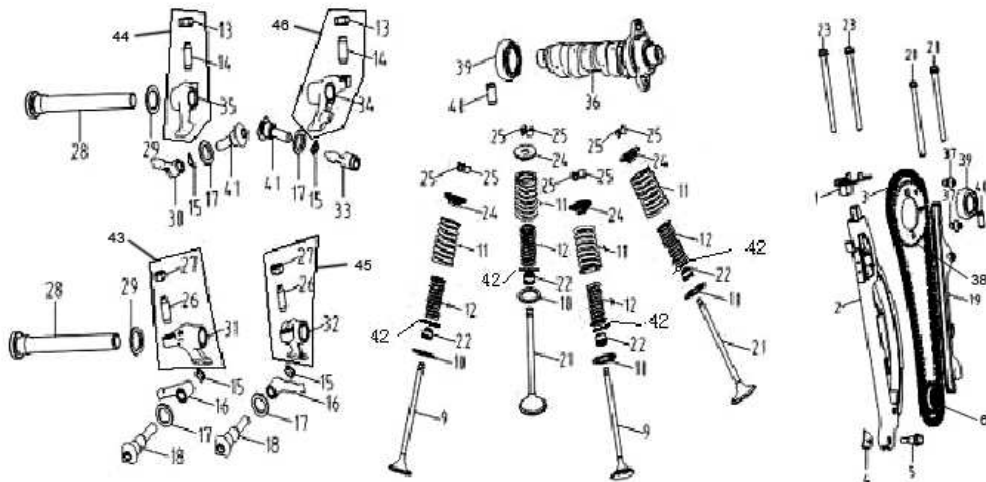

		PARTS LIST		Ref:	PL03EN
				Model:	PR5
		MIXING AIR ASSEMBLY		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
22	127304050000	VALVE SHANK OIL SEAL			4
23	127304000180	FLANGE BOLT M6X90			2
24	127304000190	VALVE SPRING BASE			4
25	127304000200	VALVE LOCK CLAMP			8
26	127304000210	INLET CLEARANCE ADJUSTING BOLT			1
27	127304000220	LOCK TIGHT NUT			1
28	127304000230	ROCKER SHAFT			2
29	127304000240	COPPER WASHER 14			2
30	127304000250	LEFT EXHAUST AUXILIARY ROCKER			1
31	127304000260	LEFT INLET DOOR ROCKER (A)			1
32	127304000270	RIGHT INLET DOOR ROCKER (B)			1
33	127304000280	RIGHT EXHAUST AUXILIARY ROCKER (B)			1
34	127304000290	RIGHT EXHAUST DOOR ROCKER (D)			1
35	127304000300	LEFT EXHAUST DOOR ROCKER			1
36	127304060000	CAMSHAFT			1
37	127304000310	INNER HEXAGON BOLT M7X9			2
38	127304000320	DRIVEN TIMING CHAIN			1
39	127304070000	BEARING 6003RS			2
40	127304000330	FIXING PIN			2
41	127304000340	EXHAUST DOOR ROCKER SHAFT			2
42	127304000350	VALVE SPRING DOWN BASE (INLET)			4
43	1273301101	LEFT INLET DOOR ROCKER ASSY			1 + 1
44	1273300701	LEFT EXHAUST DOOR ROCKER ASSY			1
45	1273301001	RIGHT INLET DOOR ROCKER ASSY			1
46	1273300801	RIGHT EXHAUST DOOR ROCKER ASSY			1
47	00MTS01A0076	RACING CAMSHAFT			1



PARTS LIST

Ref: PL04EN


Model: PR5

CYLINDER HEAD


Date: February 2011

Edition: 2nd


ITEM	PART NUMBER	DESCRIPTION	Qt.
1	127301030000	CYLINDER HEAD	1
4	127301000170	DUAL-HEAD STUD M6X35	4
5	127301000050	GASKET (10X21X2)	4
6	127301000080	FIXING PIN 8X14	2
7	127301000090	COWL HOOD GASKET	1
8	127301000060	BOLT M10X1.25X80	3
9	127301000070	BOLT M10X1.25X100	1

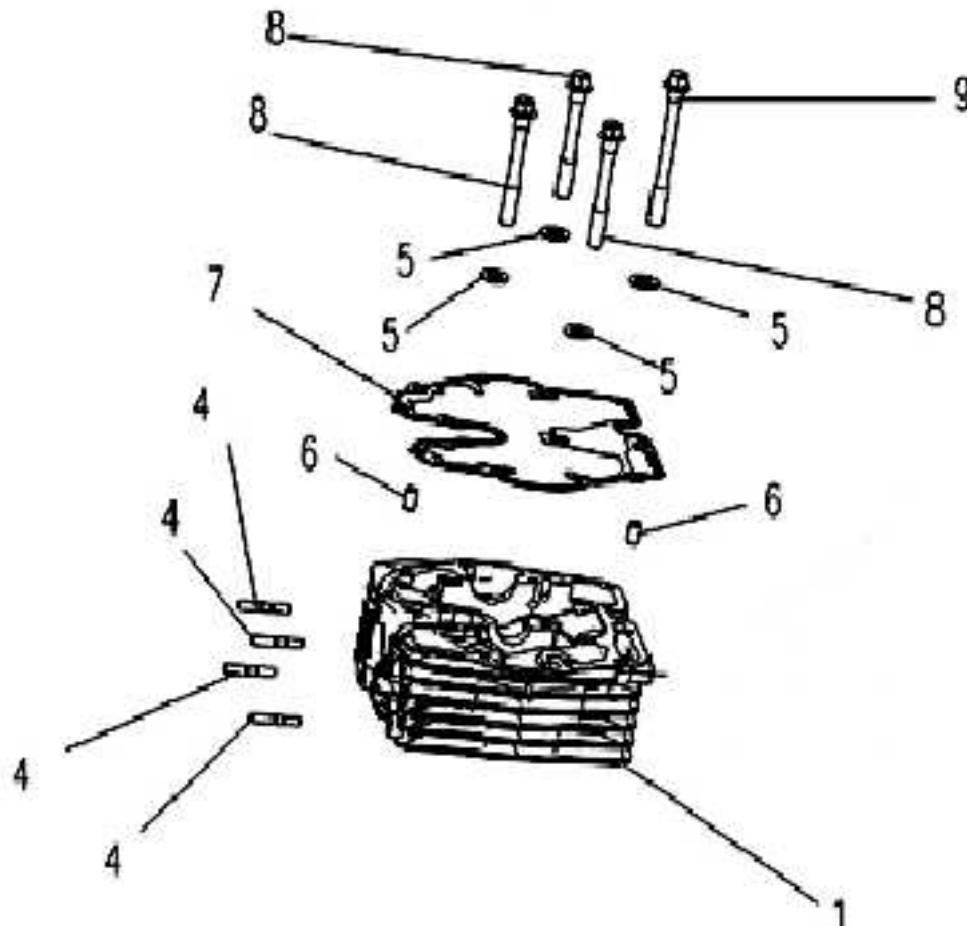


		PARTS LIST		Ref:	PL05EN
				Model:	PR5
		CYLINDER		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	127301000010	CYLINDER GASKET			1
2	127301000130	FLANGE BOLT M6X22			2
3	127301000030	BOLT M10X1.25X88			4
4	127301000040	FIXING PIN 12X20			4
5	127301010000	CYLINDER BODY COMPONENTS			1
6	127301000050	GASKET (10X21X2)			4
7	127301020000	CYLINDER HEAD GASKET			1
8	00MTS07A0078	HOLE COVER			

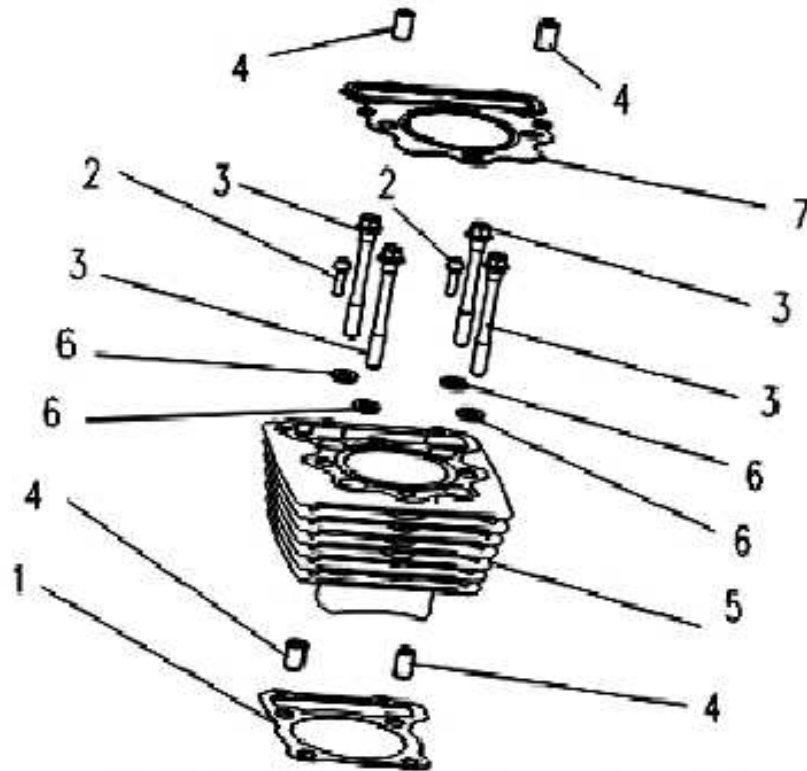


		PARTS LIST		Ref:	PL06EN
		LEFT CRANKCASE COVER		Model:	PR5
				Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	127302040010	LEFT CRANKCASE COVER			1
2	127302000020	FLANGE BOLT M6X65			7
3	127302000070	FLANGE BOLT M6X32			2
4	127302060000	STATOR WIRE GUARD			1
5	127302050000	GEAR COVER			1
6	127301000160	FLANGE BOLT M6X25			1
7	127302040030	O-RING 26X2.5			1
8	127302040050	O-RING 13.5X2.5			1
9	127302040020	NUT CAP (14mm)			1
10	127304040040	NUT CAP (27mm)			1

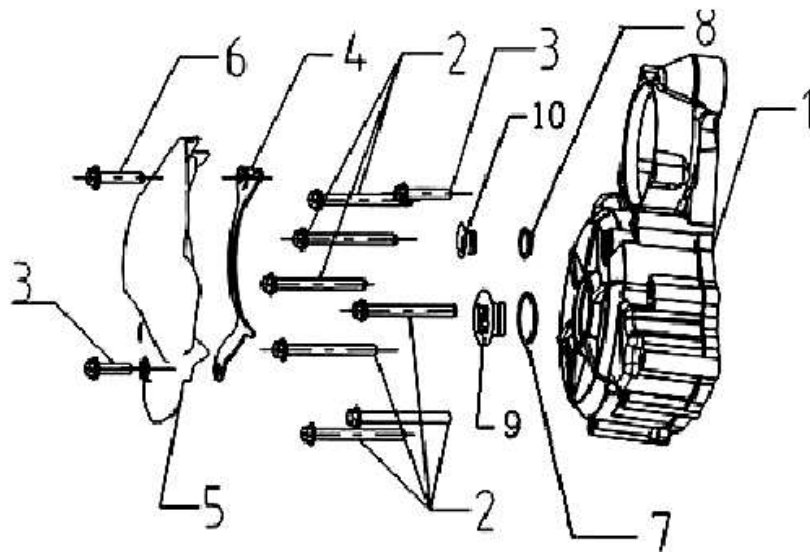

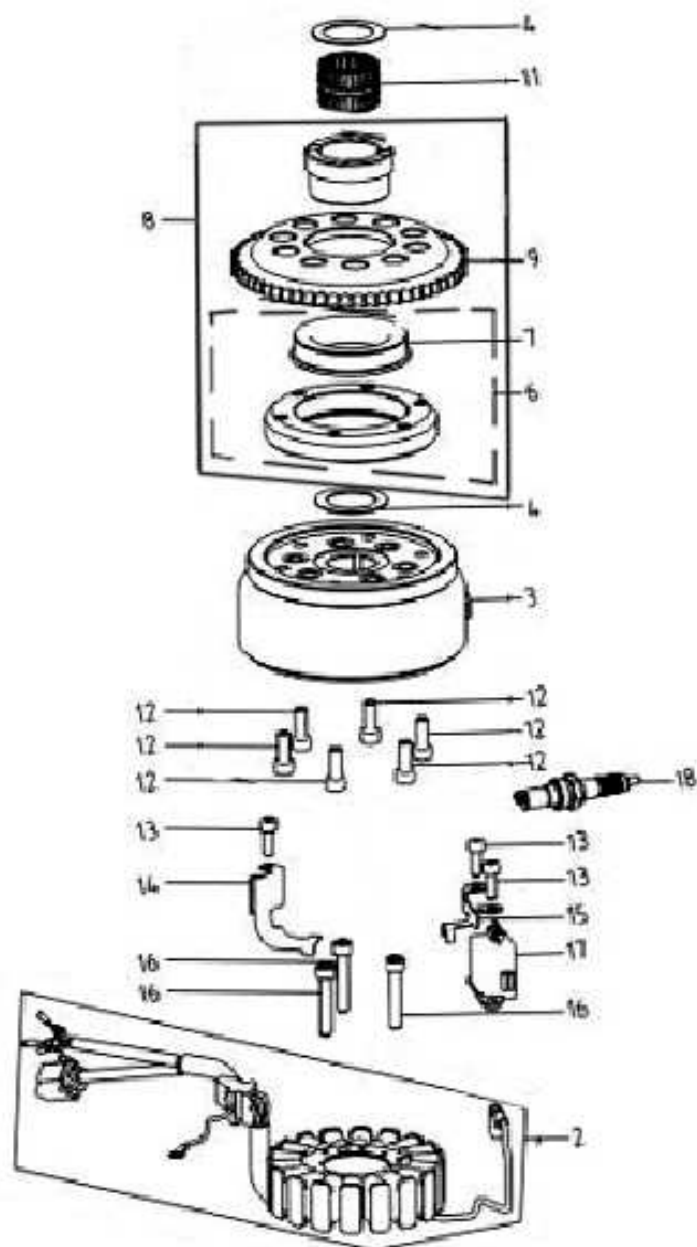



	PARTS LIST		Ref:	PL07EN
	IGNITION ASSEMBLY		Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
2	00MTS01A0070	STATOR COMPONENTS	1	
3	00MTS01A0071	ROTOR COMPONENTS	1	
4	127310010010	GASKET 26,2X38X1	2	
6	127310013010	BEARING BLOCK OF START CLUTCH	1	
7	127310013500	WEDGE TYPED SINGLE-DIRECTION THRUST BEARINGS	1	
8	127310013600	WELDS OF DRIVER STARTING GEAR	1	
9	127310013610	DRIVER STARTING GEAR	1	
11	127310014000	NEEDLE BEARING26X31X23.5	1	
12	127310010020	INNER HEXAGON BOLT M6X16	6	
13	127310000010	INNER HEXAGON BOLT M5X14	3	
14	127310000020	WIRE BLOCK	1	
15	127310000030	CABLE CLAMP OF TOGGLE SWITCH	1	
16	127310000040	INNER HEXAGON BOLT M6X30	3	
17	127310020000	TOUCH-AND-GOCOIL PRESS	1	
18	127310030000	SPARK PLUG NHSP LD 9RTCF	1	
	00ELS01A0046	SPARK PLUG NGK CR8 EH-9	1	

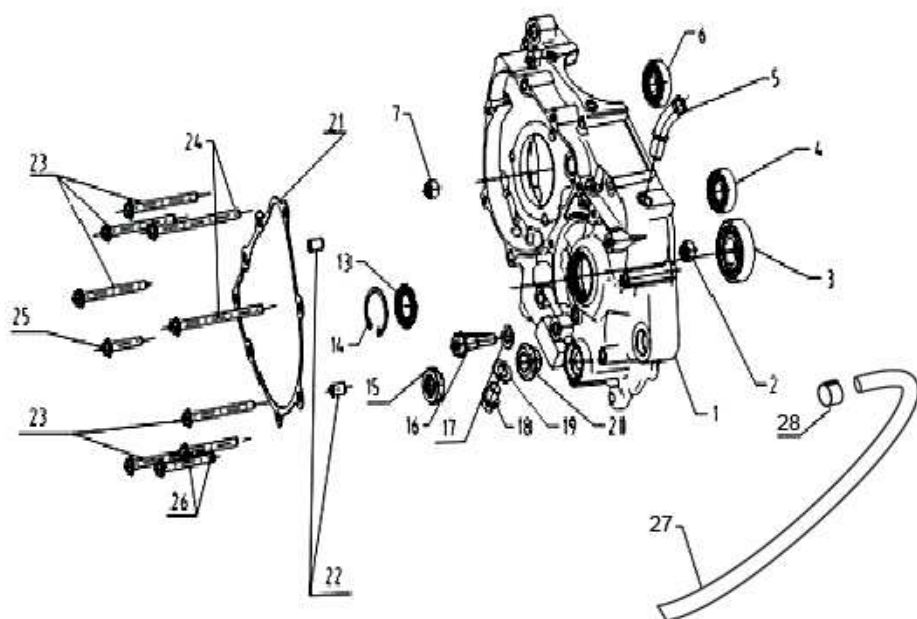


	PARTS LIST		Ref:	PL08EN
			Model:	PR5
	LEFT CRANKCASE		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	127302031000	LEFT CRANKCASE	1	
2	127302013000	BEARING HK1210V7	1	
3	127302035000	BEARING 62/22RS	1	
4	127302034000	BEARING 6202 Z	1	
5	127302030040	VENTILATION TUBE	1	
6	127302022000	BEARING 6301	1	
7	127302032000	BEARING HK1010	1	
13	127302036000	OIL SEAL 21X32X5	1	
14	127302030030	BLOCK RING 37mm	1	
15	127302033000	OIL SEAL 14X28X7	1	
16	127305000080	RETAINING BOLT FOR GEAR SHIFT ARM	1	
17	127305000090	COPPER WASHER 10X18,8X2,2	1	
18	127302030010	OIL DRAIN PLUG SCREW M12X1.25X15	1	
19	127302030020	COPPER WASHER 12X22X2	1	
20	00MTS07A0066	ARM SHAFT ENGINE SPACER 11mm	1	
21	127302000050	GASKET OF LEFT FRONT COVER	1	
22	127301000080	FIXING PIN 8X14	2	
23	127302000090	FLANGE BOLT M6X70	5	
24	127302000060	FLANGE BOLT M6X90	2	
25	127301000110	FLANGE BOLT M6X35	2	
26	127302000080	FLANGE BOLT M6X55	2	
27	00MTS01A0081	ENGINE BREATHER PIPE (15,5x9,5x500)	1	
28	00MTS01A0015	BREATHER PIPE CLAMP (14mm)	1	

		PARTS LIST		Ref:	PL09EN
				Model:	PR5
		RIGHT CRANKCASE		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	127302025000	BEARING TM8203JR2/42C3 (6303)			1
2	127302024000	BEARING TM8204NX3 (6204N)			1
3	127302021000	RIGHT CRANKCASE			1
4	00MTS07A0067	RIGHT ARM SHAFT ENGINE SPACER 16mm			1
5	127302020010	VENTILATION GUIDE PLATE			1
6	127302020020	FLANGE BOLT M6X12			1
7	127302022000	BEARING TM8301M3 (6013)			1
8	127302023000	BEARING 63/28 (28X12X18) TM-SC06829			1
9	127302000040	CASE-CLOSING SEALING GASKET			1

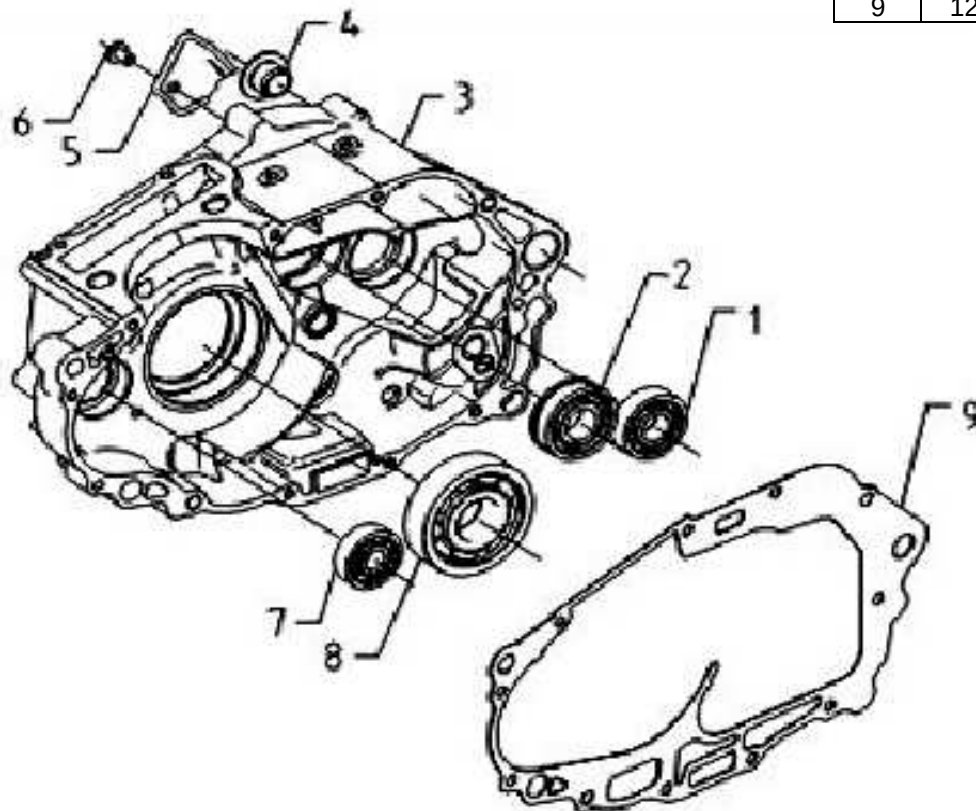


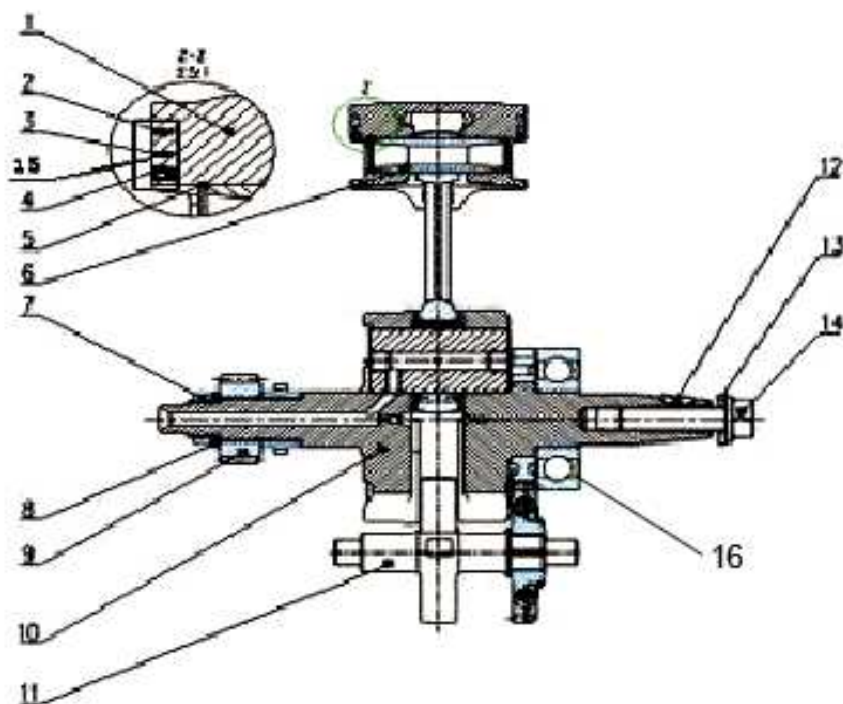


	PARTS LIST		Ref:	PL10EN
			Model:	PR5
	CRANKCASE SHAFT - BALANCESHAFT		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	127303000010	PISTON	1	
2	127303000020	FIRST PISTON RING	1	
3	127303000030	SECOND PISTON RING	1	
4	127303010000	OIL RING COMBINATION	1	
5	127303000040	PISTON PIN CLIP SPRING (17mm)	2	
6	127303000050	PISTON PIN (17X55X10)	1	
7	127303000060	NUT M18X1	1	
8	127303000070	WASHER	1	
9	127303000080	CRANKCASE SHAFT GEAR (20T)	1	
10	127303020000	CRANKSHFT CONNECTING ROD ASSEMBLY	1	
11	127303030000	BALANCE SHAFT ASSEMBLY	1	
12	127303000090	WOODRUFFKEY 4X17	1	
13	127303000100	FLYWHEEL BOLT WASHER (12X26X3)	1	
14	127303000110	FLANGE BOLT M12X1.25X45	1	
15	127303000000	PISTON RING	1	
16	127302023000	CRANKSHAFT BEARING (63/28)	1	

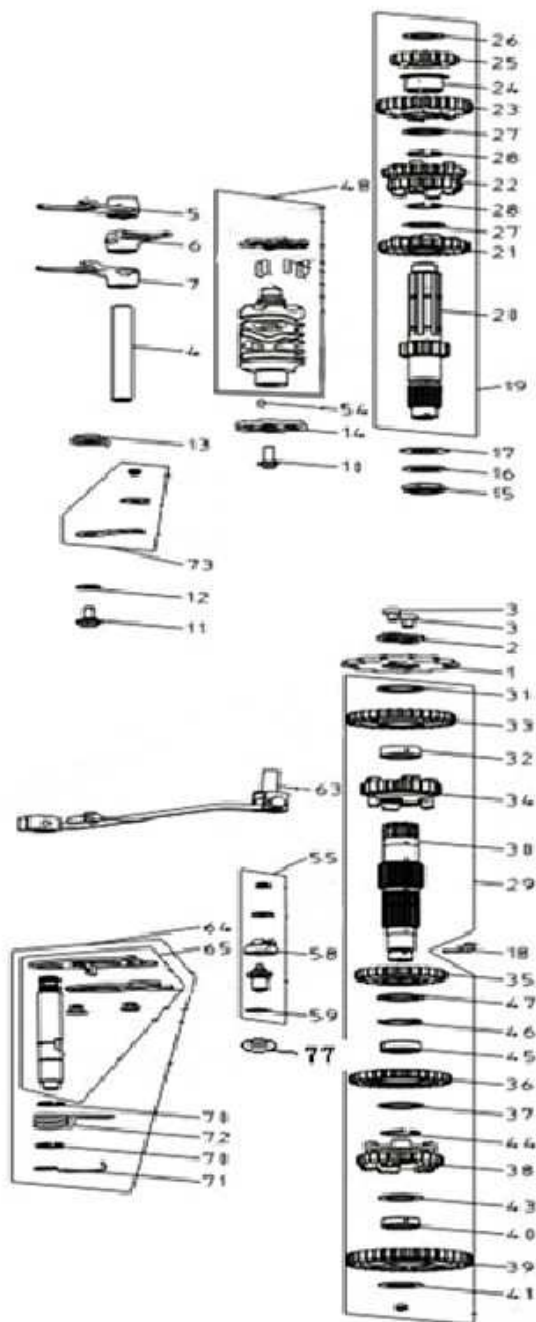



		PARTS LIST		Ref:	PL11EN
		GEARING ASSEMBLY		Model:	PR5
				Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	127305000010	OUTPUT CHAIN WHEEL			1
2	127305000020	STOP WASKER			1
3	127305000030	INNER HEXAGON BOLT M6X8			2
4	127305000040	POKE FORK SHAFT			1
5	127305000050	LEFT FORK			1
6	127305000060	MIDDLE FORK			1
7	127305000070	RIGHT FORK			1
10	127305000100	FLANGE BOLT M6X20			2
11	127305000110	STEP BOLT M6X14			1
13	127305000130	TORSION SPRING			1
14	127305000140	GEAR DRUM FIXING CAM			1
15	127305000150	PREVENT LOOSE NUT M16X1			1
16	127305000160	PRINCIPAL AXIS WASHER (16,5X26X2)			1
17	127305000170	PRINCIPAL AXIS WASHER (16,3X30X1)			1
18	127305000180	SPECIAL SHAPED SPLINT PIN			1
19	127305010000	PRINCIPAL AXIS COMPONENTS			1
20	127305010010	PRINCIPAL AXIS (13T)			1
21	127305010020	5th GEAR (26T)			1
22	127305010030	3th-4th GEAR (21/24T)			1
23	127305010040	6th GEAR (27T)			1
24	127305010050	BUSH OF 6th GEAR			1
25	127305010060	2th GEAR (17T)			1
26	127305010070	STOP WASKER (15X25X1)			1
27	127305010080	SPLINE WASKER 20mm			2
28	127305010090	STOP RING 20mm			2
29	127305020000	AUXILIARY SHAFT ASSY			1
30	127305020010	AUXILIARY SHAFT			1
31	127305020020	STOP WASKER (22X29X1)			1
32	127305020030	BUSHING,2-SHIFT GEAR,AUXILIARY SHAFT (22X25X10)			1
33	127305020040	2-SHIFT GEAR, AUXILIARY SHAFT(32T)			1
34	127305020050	6-SHIFT GEAR, AUXILIARY SHAFT(22T)			1
35	127305020060	4-SHIFT GEAR, AUXILIARY SHAFT (26T)			1

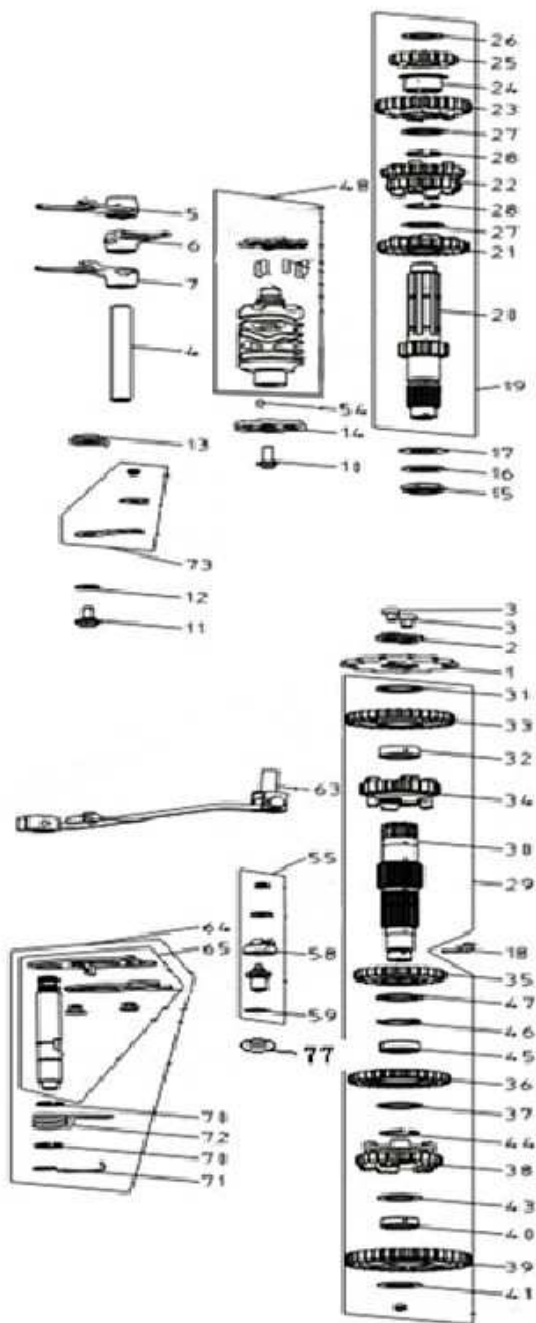



	PARTS LIST		Ref:	PL12EN
	GEARING ASSEMBLY		Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
36	127305020070	3-SHIFT GEAR, AUXILIARY SHAFT (29T)	1	
37	127305020080	SPLINE WASKER, 2-SHIFT GEAR, AUXILIARY SHAFT (22,2X29X1)	1	
38	127305020090	5-SHIFT GEAR, AUXILIARY SHAFT(24T)	1	
39	127305020100	1-SHIFT GEAR, AUXILIARY SHAFT (36T)	1	
40	127305020110	BUSHING, 1-SHIFT GEAR, AUXILIARY SHAFT (18X23X9.6)	1	
41	127305020120	STOP WASHER (17,1X25X1)	1	
43	127305020140	STOP WASHER (18X28X1)	1	
44	127305020150	STOP RING 22mm	1	
45	127305020160	BUSHING, 3-SHIFT GEAR, AUXILIARY SHAFT (22X25X9)	1	
46	127305020170	4-SHIFT SPLINE LOCK WASKER	1	
47	127305020180	4-SHIFT SPLINE WASHER	1	
48	127305030000	GEAR DRUM ASSEMBLY	1	
54	127305030030	PIN 3X9.7	1	
55	127305040000	NEUTRAL SWITCH ASSY	1	
58	127305040010	LEAD RETAINER	1	
59	127305040020	COPPER WASHER 11	1	
63	00MTS01A0069	GEARING PEDAL	1	
64	127305060000	GEARING AXLE ASSY	1	
65	127305061000	GEARING AXLE	1	
70	127305060010	P WASHER 14mm	2	
71	127305060020	HOOK SPRING, GEAR SHIFT	1	
72	127305060030	RETURN SPRING, GEAR SHIF	1	
73	127305070000	STOPPER ASSY	1	
77	127305040030	NEUTRAL SWITCH O-RING	1	
78	1273202401	OUTPUT CHAIN WHEEL ASSY	1	

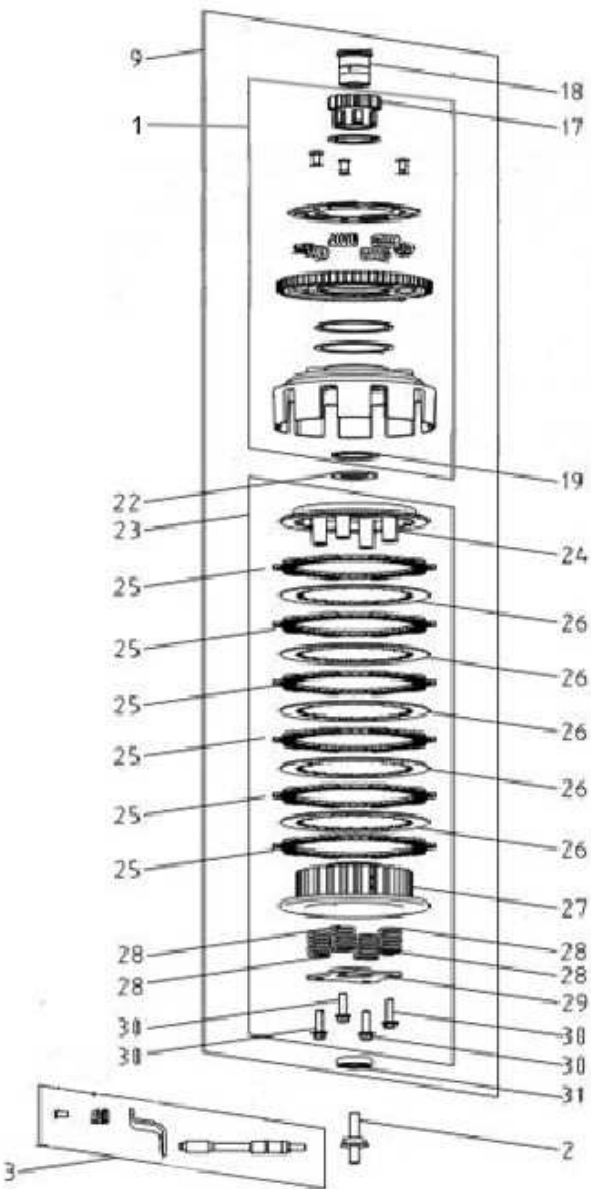

	PARTS LIST		Ref:	PL13EN
			Model:	PR5
	CLUTCH ASSEMBLY		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	127314000000	GEAR – CLUTCH 62T COMPLETE	1	
2	127314000020	CLUTCH CONTROL LEVER	1	
3	127314010000	CLUTCH PULL ROD ASSEMBLY	1	
9	127314020000	CLUTCH ASSY COMPLETE	1	
17	127314021070	START TOOTH WHEEL (14T)	1	
18	127314021080	BUSH, CLUTCH GEAR	1	
19	127314021090	STOP RING 35mm	1	
22	127314020010	WASHER	1	
23	127314022000	CLUTCH FILTER ASSY.	1	
24	127314022010	CLUTCH, PRESSURE DISC	1	
25	127314022020	FRICTIONAL PATCH	6	
26	127314022030	CLUTCH IRON PATCH	5	
27	127314022040	CLUTCH DRIVEN DISC	1	
28	127314022050	SPRING OF CLUTCH 19X36,8X13X6	4	
29	127314022060	SEPARATED DISC OF CLUTCH	1	
30	127301000130	FLANGE BOLT M6x22	4	
31	127314023000	BEARING (6903ZZ)	1	

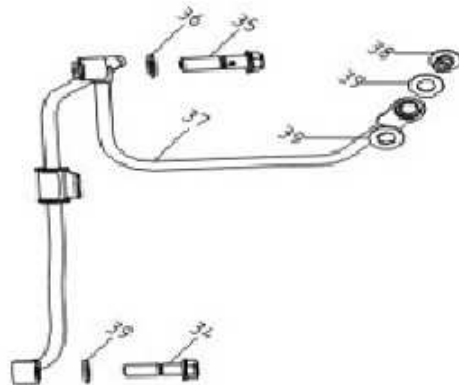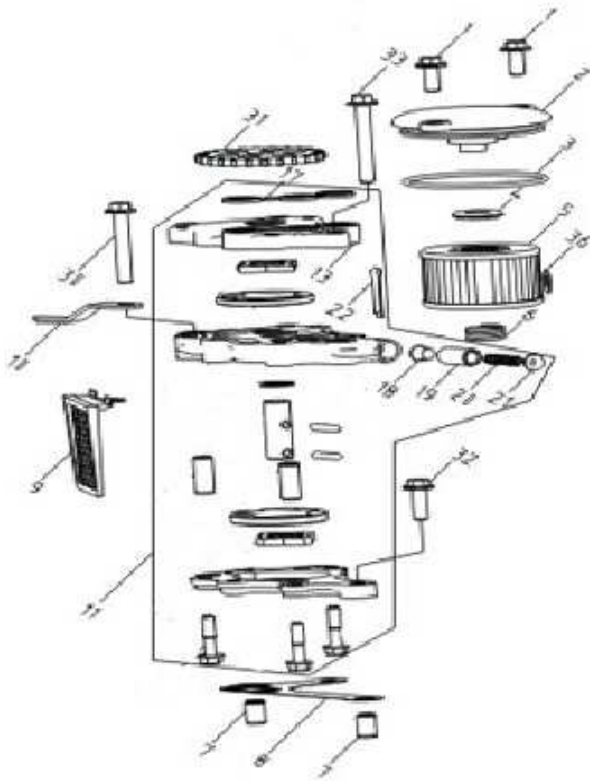

	PARTS LIST		Ref:	PL14EN
	LUBRICATE ASSEMBLY		Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	127312000010	FLANGE BOLT M6X16	2	
2	127312000020	LID OF OIL FILTER ELEMENT	1	
3	127312000030	O-RING56X2.5	1	
4	127312000040	FILTER AIR PROOF	1	
5	127312010000	OIL FILTER ELEMENT ASSY	1	
6	127312000050	SPRING OF OIL FILTER ELEMENT	1	
7	127301000080	FIXING PIN 8X14	2	
8	127312000060	OIL PUMP WASHER	1	
9	127312020000	OIL FIFTER ASSEMBLY	1	
10	127312000070	OIL FILTER PLATE	1	
11	127312030000	MACHINE OIL PUMP ASSY	1	
17	127312030060	THREE-DUPLEX LOCK RING	1	
18	127312030070	RUBBER STOPPER OF PRESSURE VALVE	1	
19	127312030080	PISTON OF PRESSURE VALVE	1	
20	127312030090	SPRING OF PRESSURE VALVE	1	

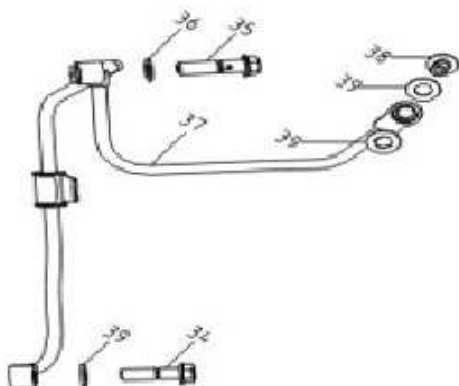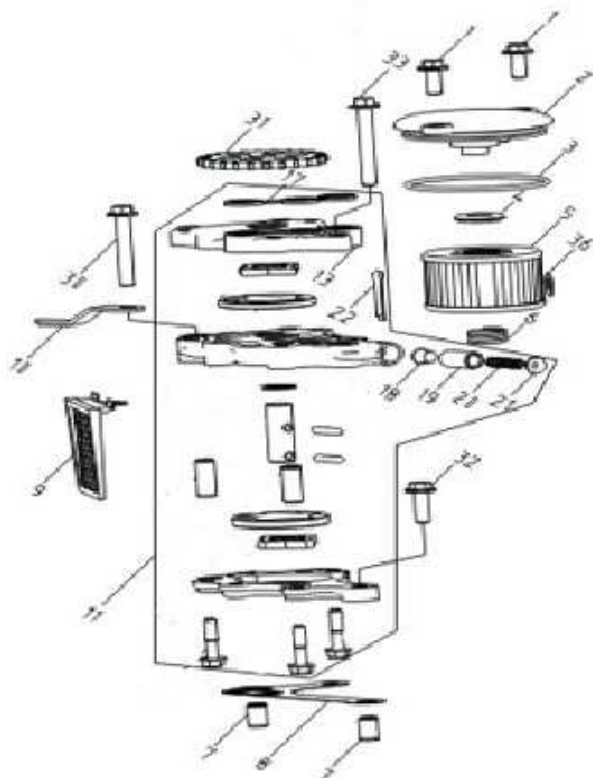

		PARTS LIST		Ref:	PL15EN
				Model:	PR5
		LUBRICATE ASSEMBLY		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
21	127312030100	SPRING SEAT OF PRESSURE VALVE			1
30	127312000080	FLANGE BOLT M6X45			4
31	127312000090	MACHINE OIL PUMP WHEEL (26T)			1
32	127305000100	FLANGE BOLT M6X20			1
33	127312000100	FLANGE BOLT M6X50			1
34	127312000110	HOLLOW STAY BOLT M7X25X1.4			1
35	127312000120	HOLLOW STAY BOLT M8X28X3			1
36	127312000130	COPPER WASHER (8,2X14,2X0,8)			2
37	127312040000	OIL PIPE ASSY			1
38	127312000140	HOLLOW STAY BOLT M7X25X3.2			1
39	127312000150	COPPER WASHER (7,2X14,2X1,2)			4





PARTS LIST

Ref:	PL16EN
Model:	PR5
Date:	February 2011
Edition:	2nd


RIGHT CRANKCASE COVER

ITEM	PART NUMBER	DESCRIPTION	Qt.
1	127302000010	FLANGE BOLT M6X28	5
2	127301000100	FLANGE BOLT M6X40	3
3	127302000020	FLANGE BOLT M6X65	3
4	127301000130	FLANGE BOLT M6X22	2
5	127302020080	OIL FILTER LID	1
6	127302010010	RIGHT COVER	1
7	127302010050	FIXING PIN 10X14	2
8	127302010040	O-RING 10X2	2
9	127302010070	OIL BOLT M6X12	1
10	127302010060	COPPER WASHER 6	1
11	127302010090	O-RING	1
12	127302011000	OIL SEAL 14X22X5	1
13	127302010020	GASKET 24mm	1
14	127302013000	BEARING HK1210V7	2
15	127302012000	OIL SEAL 12X18X5	1
16	12426-I008-0000	OIL VISOR (ZS 29X7,5)	1
17	127302000030	CLUTCH COVER GASKET	1
18	127301000080	FIXING PIN 8X14	2
19	127314000010	TORSION SPRING (1,4X11X23,5)	1
20	23234I0060000	WASHER 24 X 17X 0.5	1

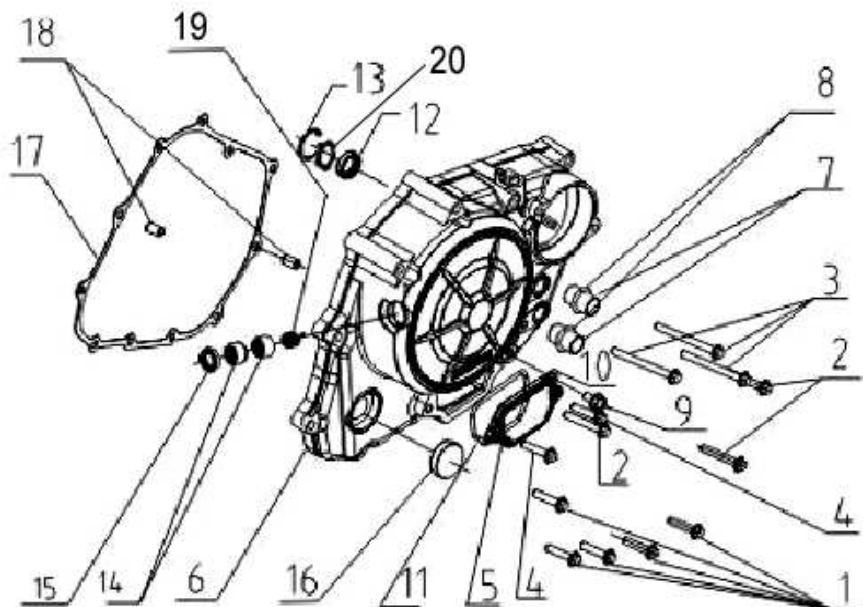


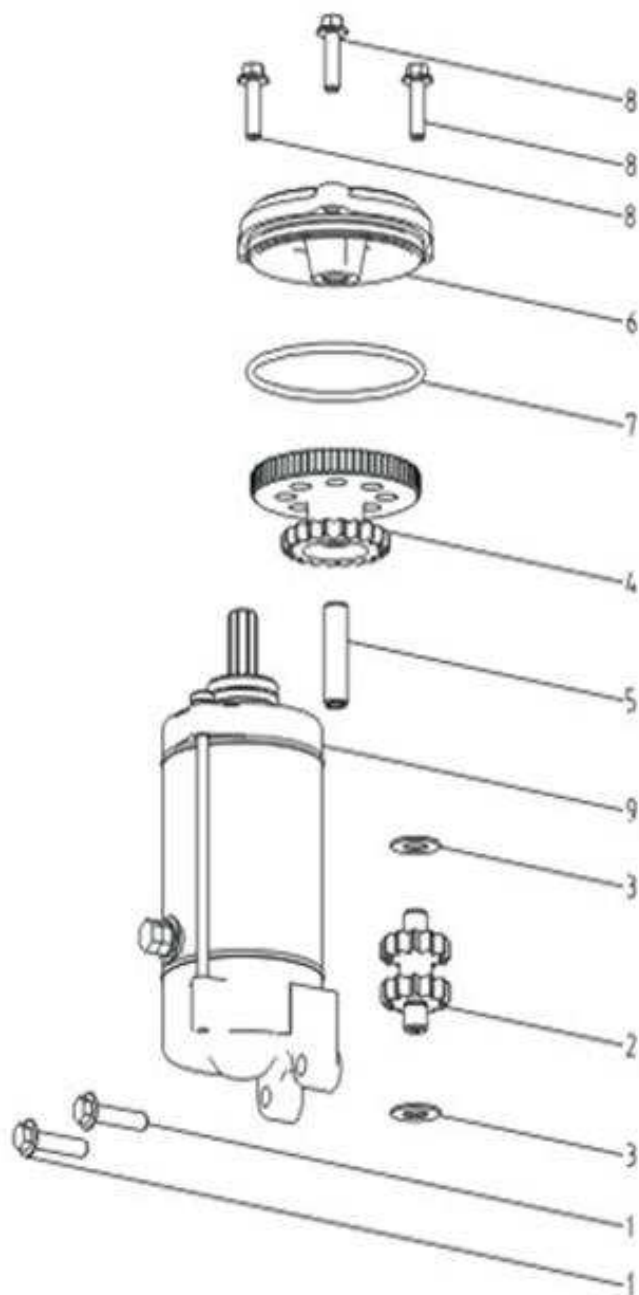


		PARTS LIST	Ref:	PL17EN
		START MOTOR	Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	127302000010	FLANGE BOLT M6X28	2	
2	127311000010	DOUBLE-DUPLEX IDLE GEAR (12/12T)	1	
3	127311000020	GASKET 10X20X1	2	
4	127310000030	DOUBLE-DUPLEX GEAR	1	
5	127310000040	DOUBLE-DUPLEX GEAR SHAFT (10X35X6)	1	
6	127310000050	TWIN-CHAIN GEAR COVER SET	1	
7	127310000060	O-RING 70X3	1	
8	127310000100	FLANGE BOLT M6X20	3	
9	127311010000	START MOTOR	1	

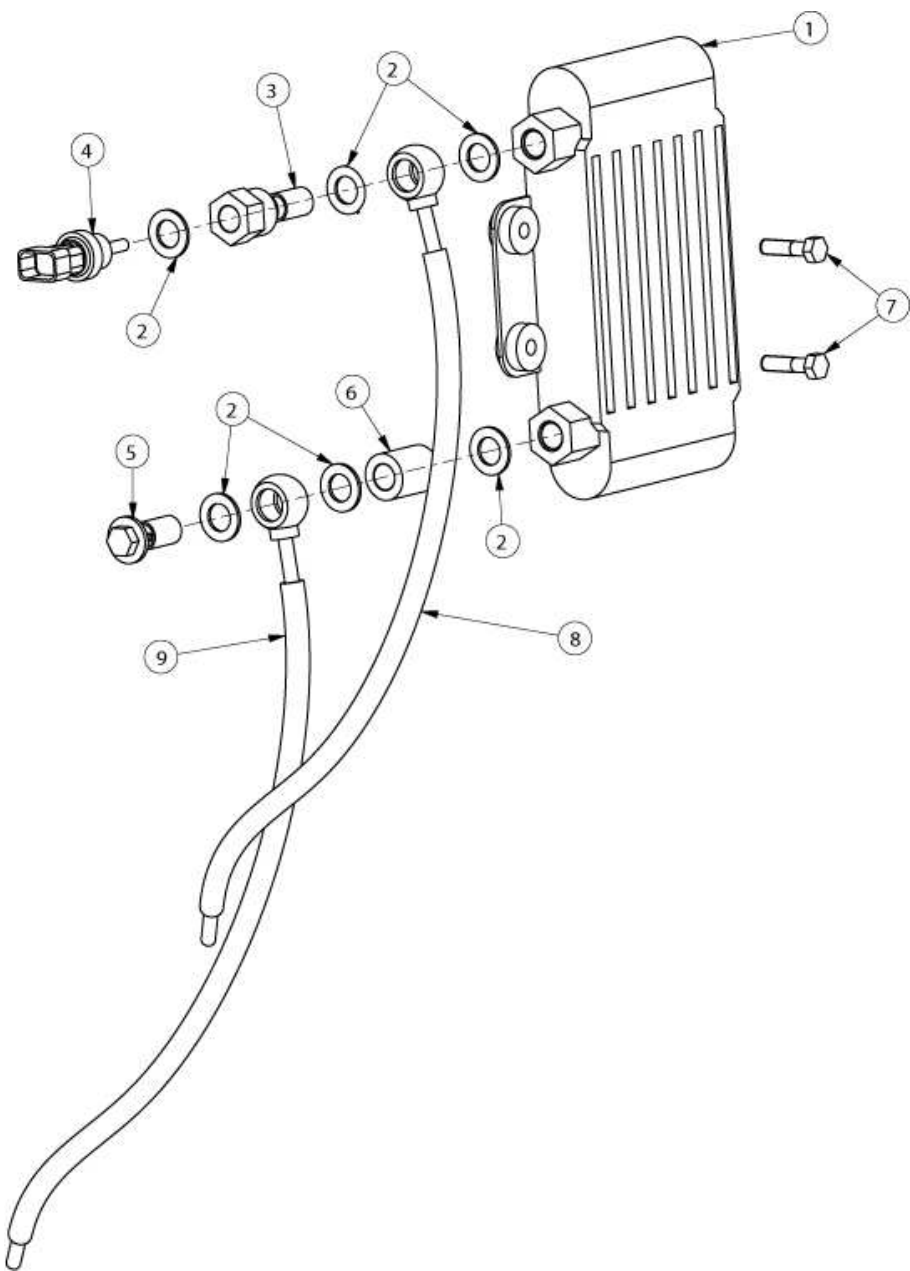


	PARTS LIST		Ref:	PL18EN
			Model:	PR5
	OIL COOLER		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00MTS01A0044	OIL COOLER	1	
2	93301-80821014AJP	SEALING WASHER (12,2X19,7X1,5)	6	
3	00MTS07A0048	SCREW	1	
4	00MTS01A0051	TEMPERATURE SENSOR	1	
5	00MTS07A0050	SCREW M12X1.25	1	
6	00MTS01A0049	SPACER	1	
7	PF0933006020	SCREW DIN933 M6X20	2	
8	00MTS01A0046	OIL COOLER LONG TUBE	1	
9	00MTS01A0047	OIL COOLER SHORT TUBE	1	

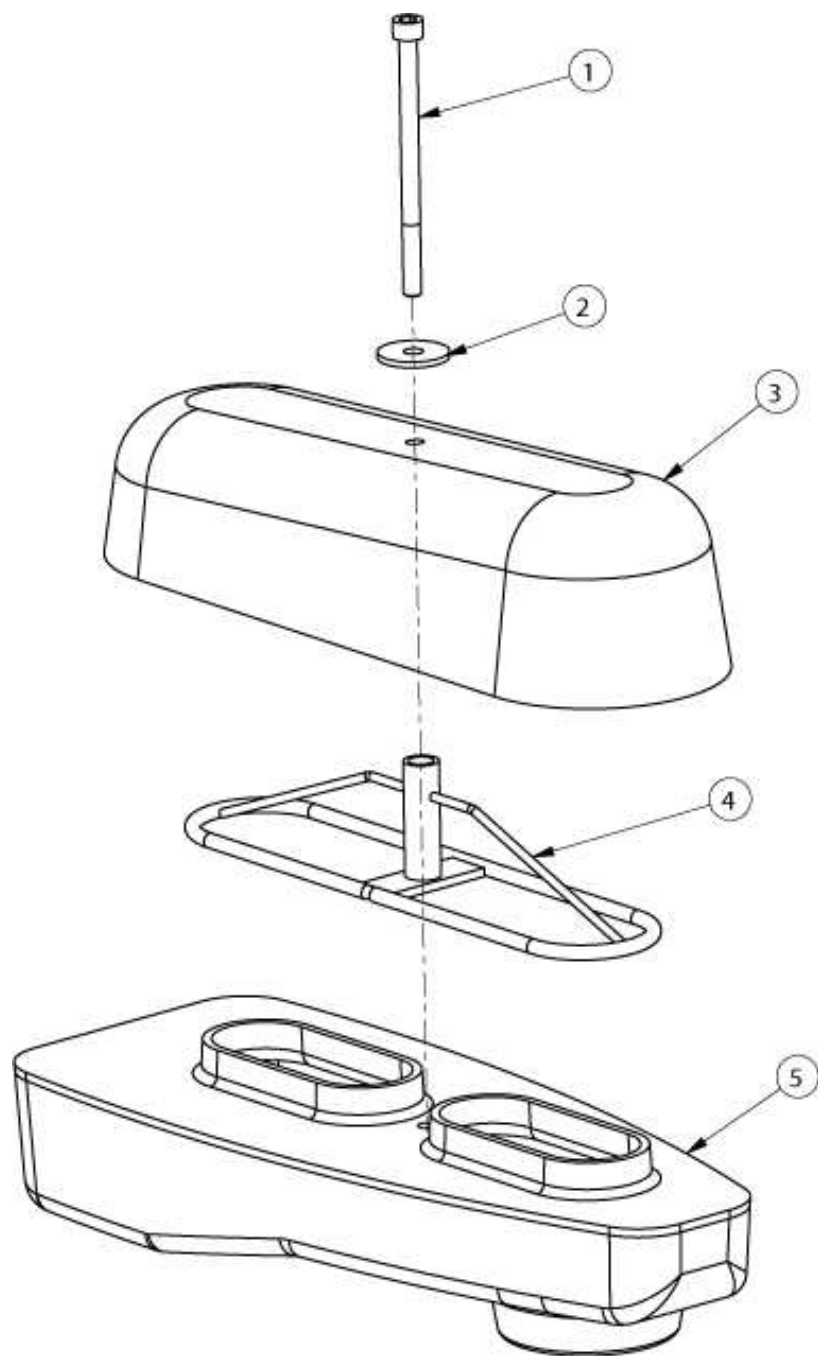

		PARTS LIST		Ref:	PL19EN
		AIR FILTER		Model:	PR5
				Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	PF0912006090	SCREW DIN912 M6X90			1
2	AN9021006000	WASHER DIN9021 M6			1
3	00MTS01A0043	AIR FILTER			1
4	00MTS07A0045	AIR FILTER BRACKET			1
5	00MTS01A0039	AIR FILTER BOX			1

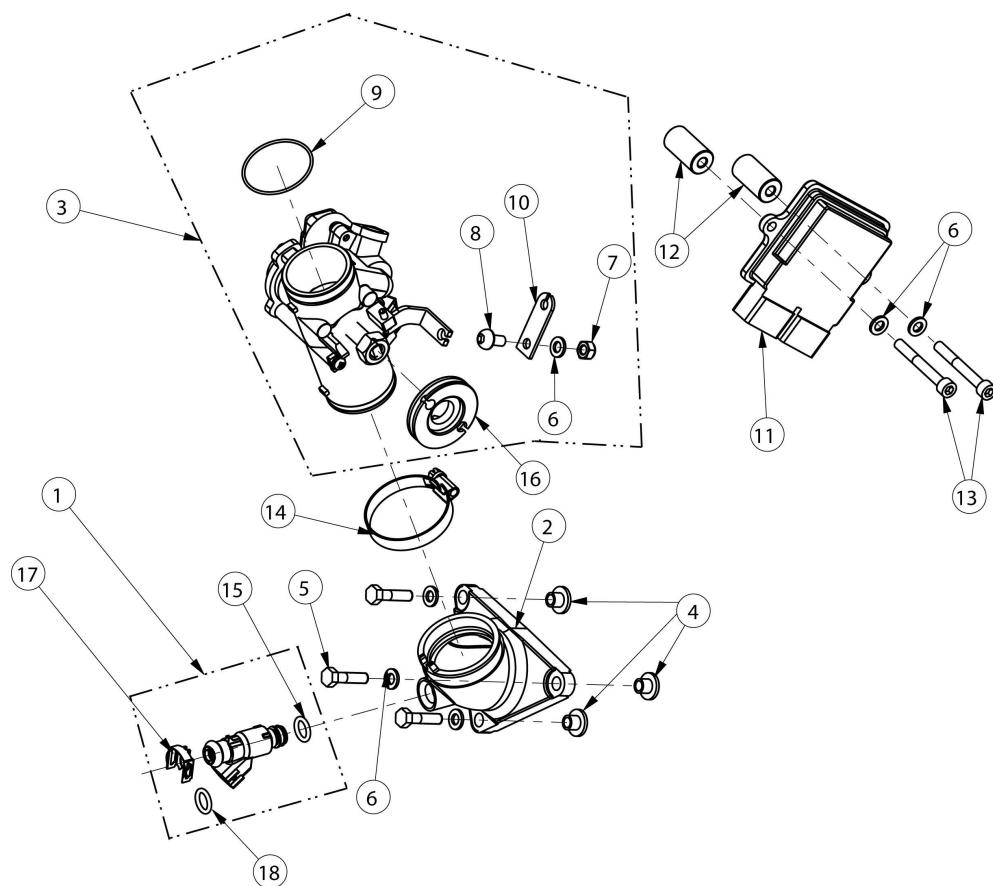



	PARTS LIST		Ref:	PL20EN
			Model:	PR5
	INJECTION SYSTEM		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00MTC01A0058	INJECTOR	1	
2	00MTS01A0040	INTAKE HOSE	1	
3	00MTC01A0057	THROTTLE BODY	1	
4	00MTS07A0041	SPACER	3	
5	PF0912006020	SCREW DIN912 M6X20	3	
6	AN125A006000	WASHER DIN125A M6	6	
7	PC0985006000	NUT DIN985 M6	1	
8	PF7380006012	SCREW ISO 7380 M6X12	1	
9	00MTS01A0062	O-RING (39X1,5)	1	
10	00MTS07A0061	BRACKET	1	
11	00MTS01A0038	ECU	1	
12	00MTS01A0064	SPACER	2	
13	PF0912006050	SCREW DIN912 M6X50	2	
14	00DES01A0018	CLAMP 32X50	1	
15	00MTS01A0074	O-RING NBR (10X2,5)	1	
16	00MTS01A0075	THROTTLE CABLE STOPPER	1	
17	00MTS01A0060	INJECTOR COVER CLIP	1	
18	00MTS01A0059	INJECTOR O-RING (7x4)	1	

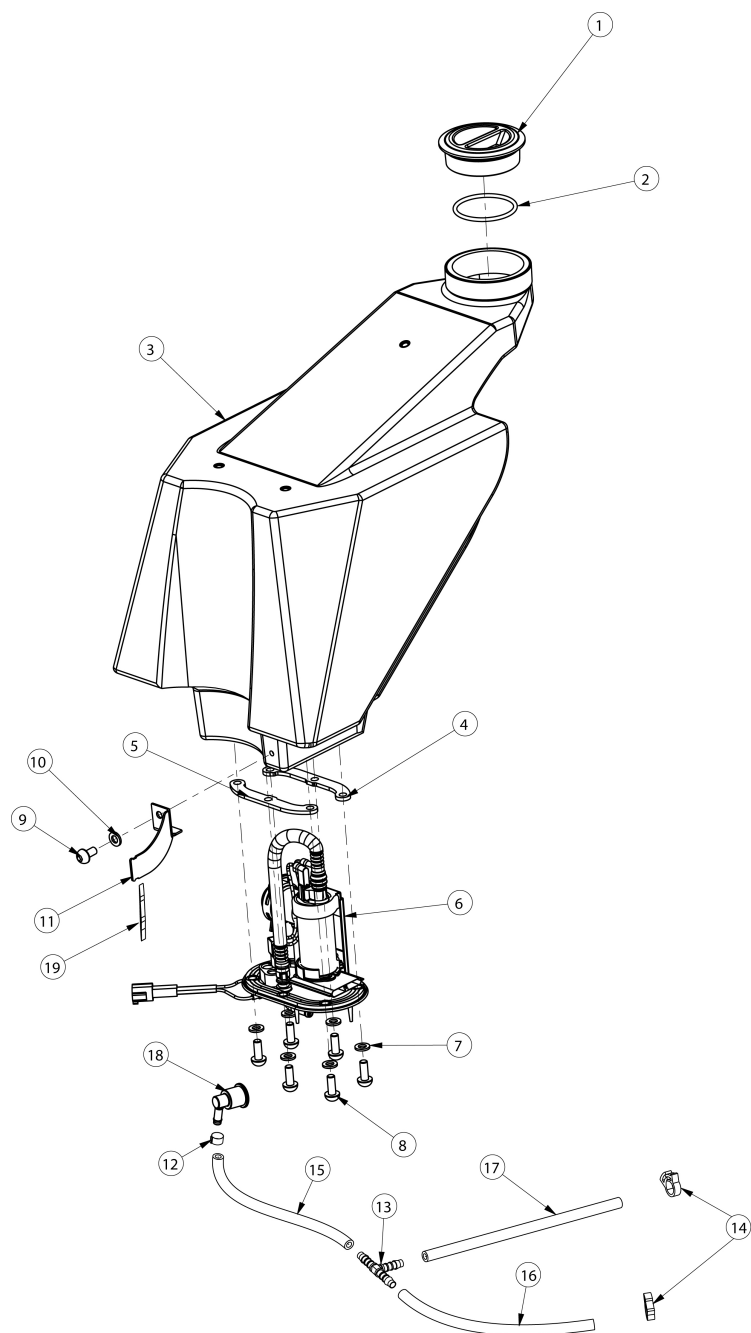


		PARTS LIST	Ref:	PL21EN
		FUEL TANK	Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00DES02A0039	FUEL CAP	1	
2	00DES01A0028	FUEL CAP O-RING VITON 45X3	1	
3	00DES01A0038	FUEL TANK	1	
4	00DES07A0041	FUEL PUMP REAR BRAKET	1	
5	00DES07A0042	FUEL PUMP FRONT BRAKET	1	
6	00DES01A0040	FUEL PUMP	1	
7	00DES01A0043	SEAL WASHER	6	
8	PF7380006020	SCREW ISO7380 M6X20	6	
9	PF7380006012	SCREW ISO7380 M6X12	1	
10	AN127A006000	WASHER DIN127A M6	1	
11	00DES01A0044	HOSE PROTECTION PLATE	1	
12	00DES01A0045	CLAMP	1	
13	00DES01A0008	T CONECTION	1	
14	00DES01A0046	CLAMP MINIFEX N°1 (7-11mm)	2	
15	00DES01A0047	INJECTOR HOSE (5X10X80)	1	
16	00DES01A0048	FUEL RETURN HOSE (5X10X260)	1	
17	00DES01A0049	FUEL FEED HOSE (5X10X240)	1	
18	00DES01A0050	INJECTOR CAP	1	
19	00DES01A0017	PLASTIC CLAMP	1	

	PARTS LIST		Ref:	PL22EN
			Model:	PR5
	MUFFLER		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00MTS01A0042	EXHAUST MUFFLER	1	
2	00MTS06A0054	EXHAUST PIPE	1	
3	00MTS04A0052	EXHAUST PIPE PROTECTION	1	
4	PF0933008020	SCREW DIN933 M8X20	1	
5	AN127B008000	WASHER DIN127B M8	1	
6	PF7380006012	SCREW ISO7380 M6X12	2	
7	AN127B006000	WASHER DIN127B M6	2	
8	PC0980006000	NUT DIN980 M6	4	
9	AN125A006000	WASHER DIN125A M6	4	
10	00MTS01A0056	OXYGEN SENSOR	1	
11	00MTS06A0053	EXHAUST MUFFLER PIPE	1	
12	00MTS01A0055	EXHAUST MUFFLER SPRING	1	
13	00MTS01A0072	WASHER 5/16	1	
14	00MTS01A0073	EXHAUST PIPE GASKET	2	
15	00MTS07A0079	MUFFLER BRACKET	1	
16	00MTS01A0080	RIVET	4	

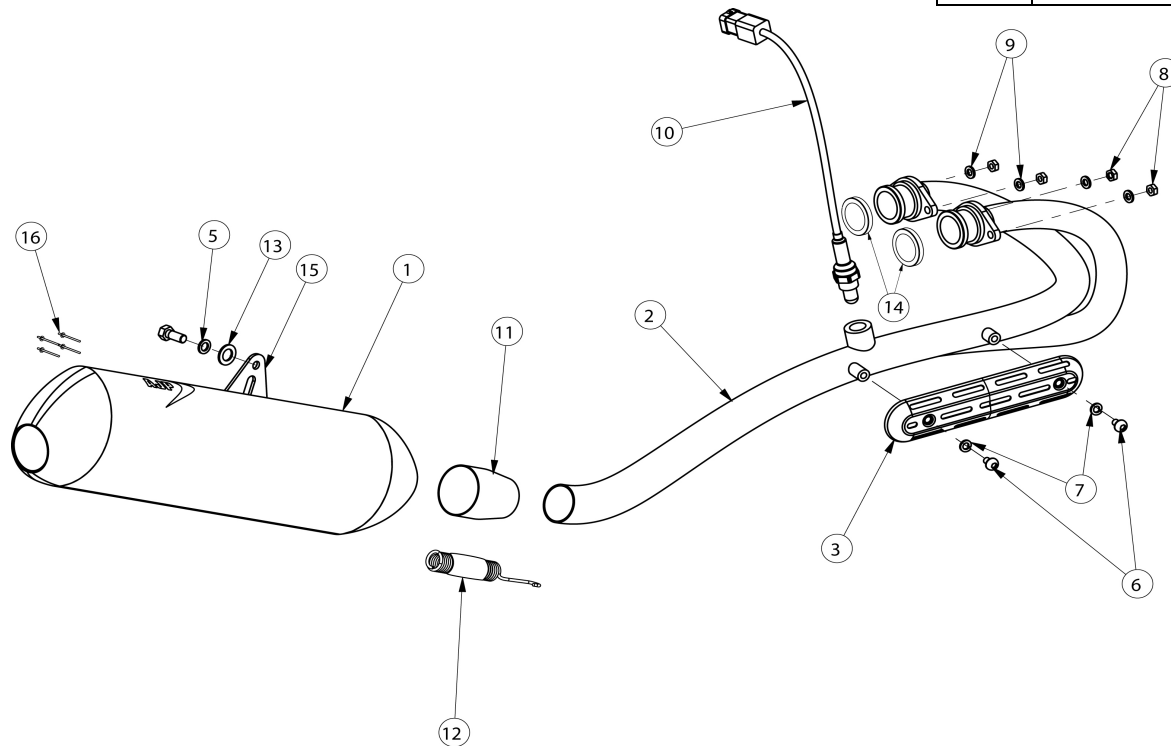


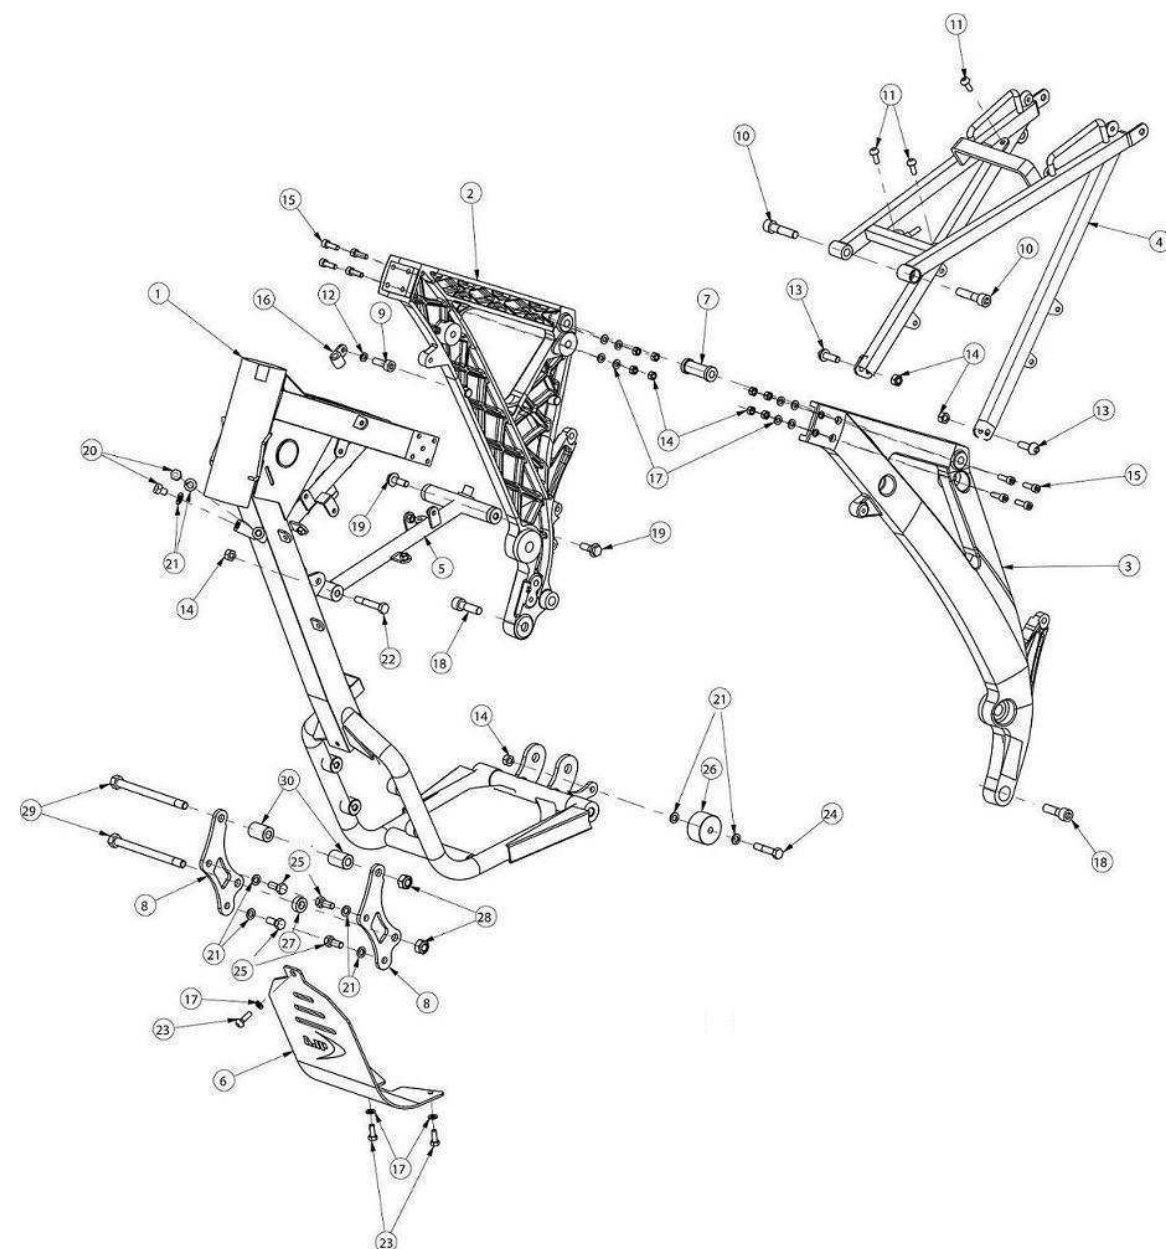


		PARTS LIST	Ref:	PL23EN
		FRAME	Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt	
1	00QUS04A0050	FRAME	1	
2	00QUS01A0048	FRAME BEAM RH	1	
3	00QUS01A0049	FRAME BEAM LH	1	
4	00QUS06A0047	REAR FRAME	1	
	00QUS06A0056	COMPETITION REAR FRAME	1	
5	00QUS04A0051	FRAME REINFORCEMENT	1	
6	00QUS03A0052	FRAME COVER	1	
7	00QUS07A0057	SPACER	1	
8	00QUS07A0053	FRONT ENGINE MOUNT	2	
9	PF0933006012	SCREW DIN 933 M6X12	1	
10	PF0912010050	SCREW DIN912 M10X50	2	
11	PF7380006012	SCREW ISO7380 M6X12	3	
12	AN127B008000	WASHER DIN127B M8	1	
13	PF7380008025	SCREW ISO7380 M8X25	2	
14	PC0985008000	NUT DIN985 M8	2	
15	PF0912006020	SCREW DIN912 M6X20	8	
16	00QUS07A0055	CLUTCH CABLE BRACKET	1	
17	AN127A006000	WASHER DIN127A M6	21	
18	PF0912012040	SCREW DIN912 M12X40	2	
19	PF6921008025	SCREW DIN6921 M8X25	2	
20	PF0933008010	SCREW DIN933 M8X10	2	
21	AN127B008000	WASHER DIN127B M8	3	
22	PF6921008050	SCREW DIN6921 M8X50	1	
23	PF7380006016	SCREW ISO7380 M6X16	3	
24	PF6921008045	SCREW DIN6921 M8X45	1	
25	PF0933008016	SCREW DIN933 M8X16	4	
26	00QUS01A0022	CHAIN ROLLER (40mm)	1	
27	00QUS07A0058	BOTTOM LEFT ENGINE POSITIONING SPACER	1	
28	PC0985010000	NUT DIN985 M10	2	
29	PF0931010130	SCREW DIN931 M10X130	2	
30	00QUS07A0054	UPPER RIGHT ENGINE POSITIONING SPACER	2	

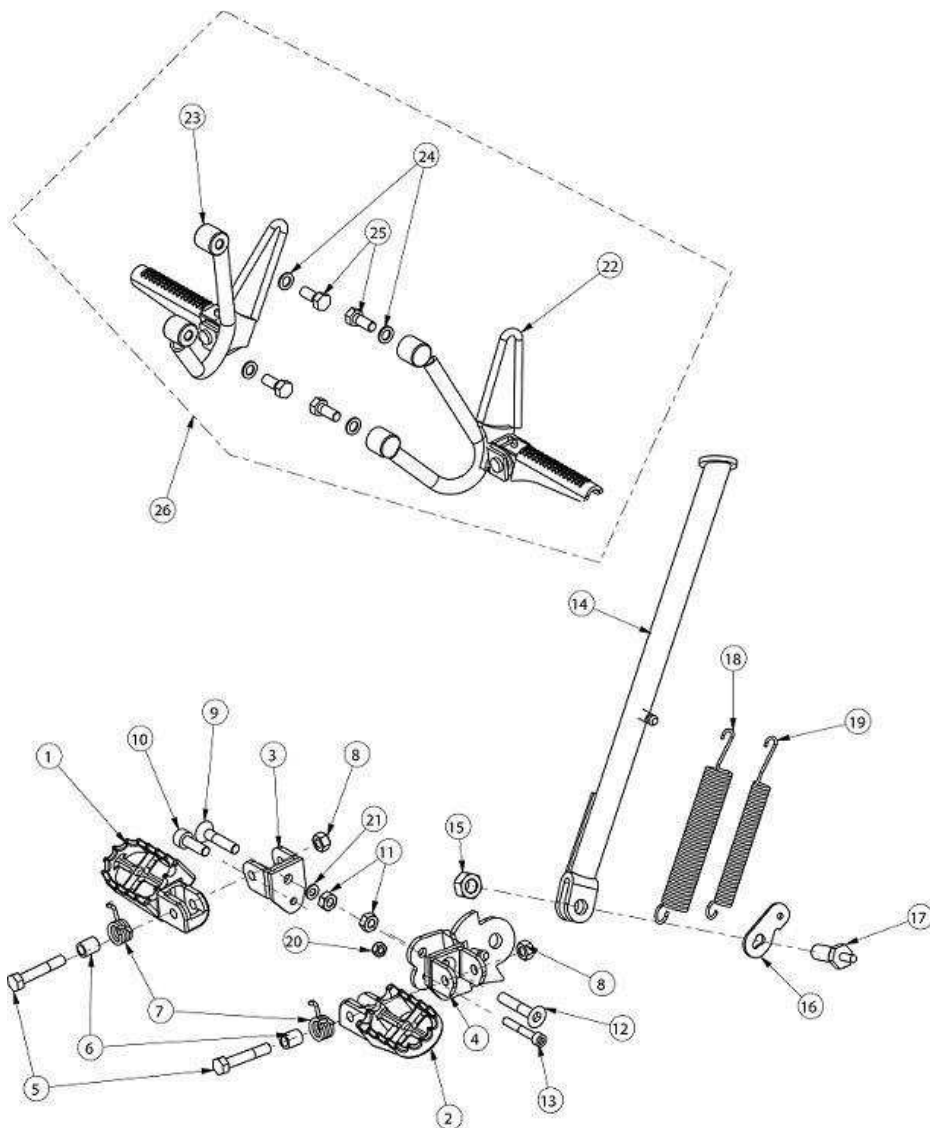


		PARTS LIST		Ref:	PL24EN
				Model:	PR5
		STAND / FOOTPEG		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	00QUS03A0032	FRONT FOOTPEG RH			1
2	00QUS03A0031	FRONT FOOTPEG LH			1
3	00QUS07A0046	FRONT FOOTPEG HOLDER RH			1
4	00QUS07A0045	FRONT FOOTPEG HOLDER LH			1
5	PF0931008045	SCREW DIN931 M8X45			2
6	PC0934008000	NUT DIN934 M8			1
7	00QUS07A0033	FRONT FOOTPEG SPRING			2
8	PC0985008000	NUT DIN985 M8			2
9	PF7991008035	SCREW DIN7991 M8X35			1
10	PF0912006025	SCREW DIN912 M6X25			1
11	PC0985008000	NUT DIN985 M8			1
12	PF7991008040	SCREW DIN7991 M8X40			1
13	PF0912006035	SCREW DIN912 M6X35			1
14	00QUS04A0044	SIDE STAND EN			1
	00QUS04A0039	SIDE STAND SM			1
15	PC0985012000	NUT DIN985 M12			1
16	00QUS01A0017	SPRING HOLDER			1
17	00QUS04A0016	STUD			1
18	00QUS01A0013	OUTER SPRING			1
19	00QUS01A0014	INNERSPRING			1
20	PC0985006000	NUT DIN985 M6			1
21	AN0125A08000	WASHER DIN125A M8			1
22	00QUS01A0040	REAR FOOTPEG ASSEMBLY LH			1
23	00QUS01A0018	REAR FOOTPEG ASSEMBLY RH			1
24	AN0125008000	WASHER DIN125 M8			4
25	PF0933008016	SCREW DIN933 M8X16			4
26	00QUC01A0041	COMPLETE REAR FOOTPEG ASSEMBLY			1

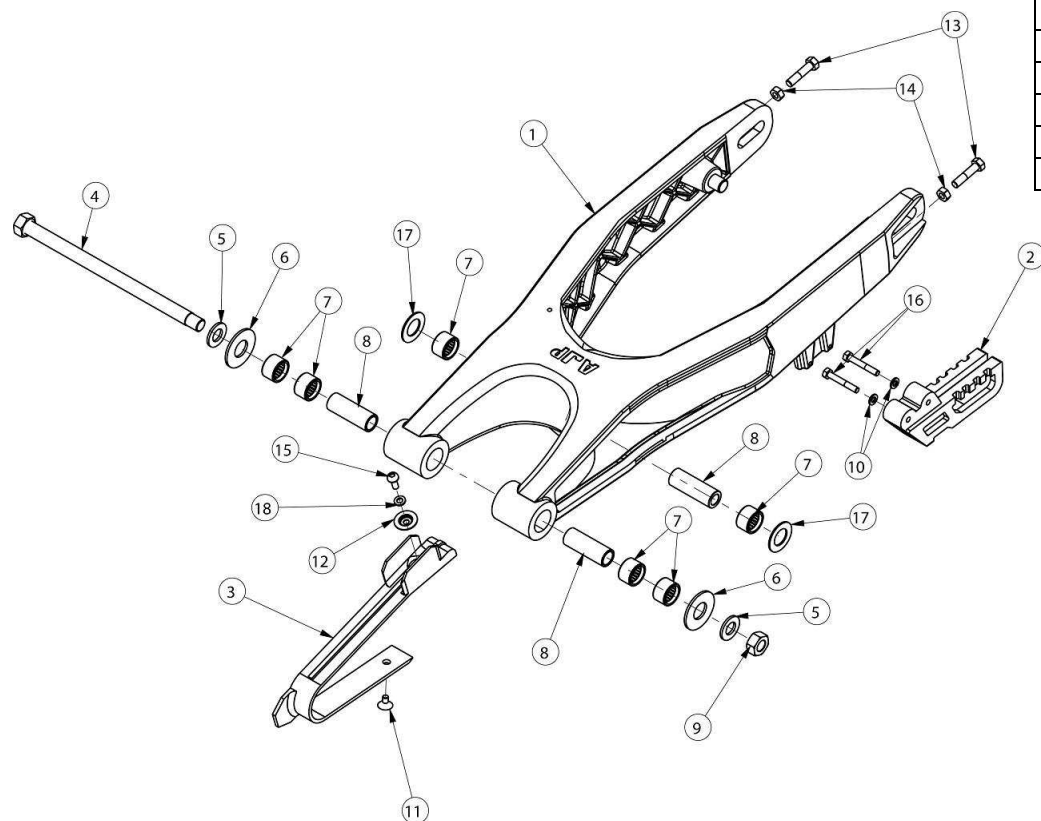


	PARTS LIST		Ref:	PL25EN
			Model:	PR5
	REAR SWING ARM		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00STS02A0084	REAR SWING ARM	1	
	00STC02A0090	COMPLETE REAR SWING ARM	1	
2	00STS01B0007	CHAIN GUIDE	1	
3	00PLS01A0049	CHAIN TOUCHE DEFENSE BUFFER	1	
4	00STS07A0083	PIVOT SHAFT	1	
5	AN125A014000	WASHER DIN125A M14	2	
6	00STS01A0086	WASHER 45X20X2,5	2	
7	RL00HK2020RS	BEARING HK2020RS	6	
8	00STS01A0085	SPACER 15X20X55	2	
9	PC0934014000	NUT DIN934 M14	1	
10	AN9021006000	WASHER DIN9021 M6	2	
11	PF7991006012	SCREW DIN7991 M6X12	1	
12	00PLS07A0029	WASHER	1	
13	PF0933008035	SCREW DIN933 M8X35	2	
14	PC0934008000	NUT DIN934 M8	2	
15	PF7380006012	SCREW ISO7380 M6X12	1	
16	PF0912006040	SCREW DIN912 M6X40	2	
17	00STS01A0091	WASHER 35X20X2	2	
18	AN125A006000	WASHER DIN125A M6	1	

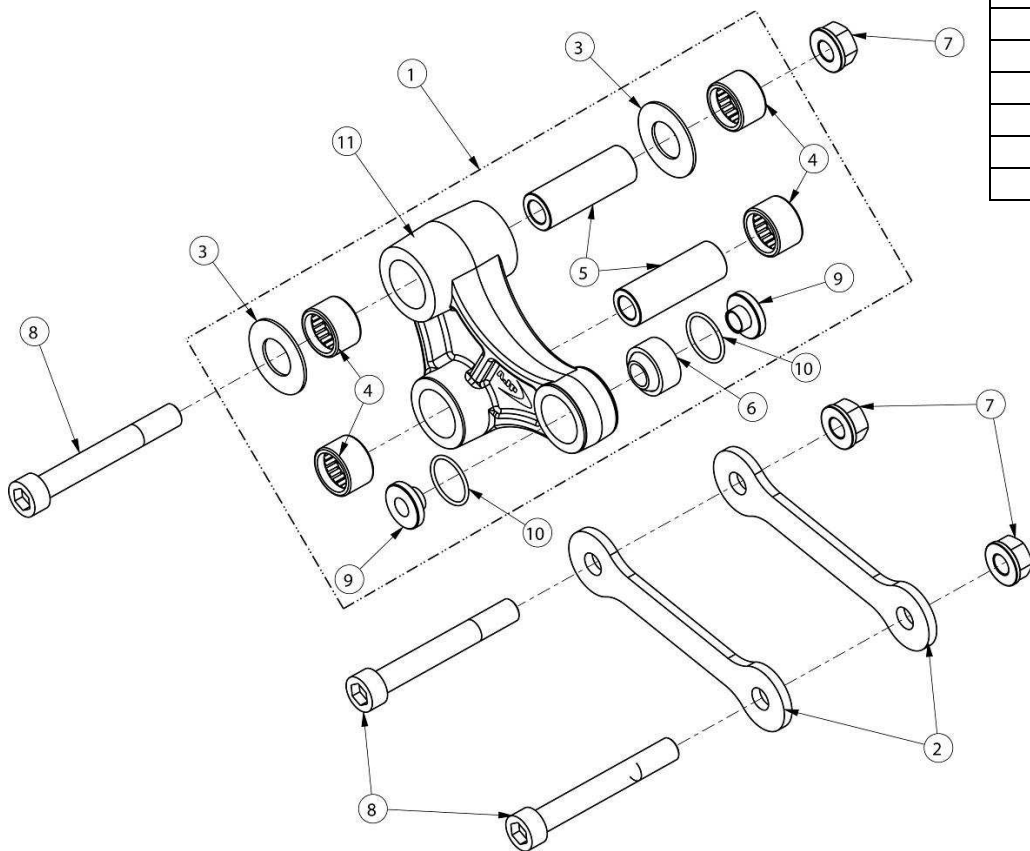

		PARTS LIST		Ref:	PL26EN
				Model:	PR5
		REAR CUSHION LEVER		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	00STC01A0080	FRAME LINK ASSEMBLY			1
2	00STS07A0077	REAR ARM LINK			2
3	00STS01A0078	WASHER 41X20X1,5			2
4	RL00HK2020RS	BEARING HK2020 RS			4
5	00STS01A0081	SPACER 12X20X57			2
6	00STS01A0079	ROD			1
7	PC0985012000	NUT DIN985 M12			3
8	PF0912012080	SCREW DIN912 M12X80			3
9	00STS01A0088	SPACER			2
10	00STS01A0087	O-RING (22X2)			2
11	00STS01A0089	FRAME LINK			1

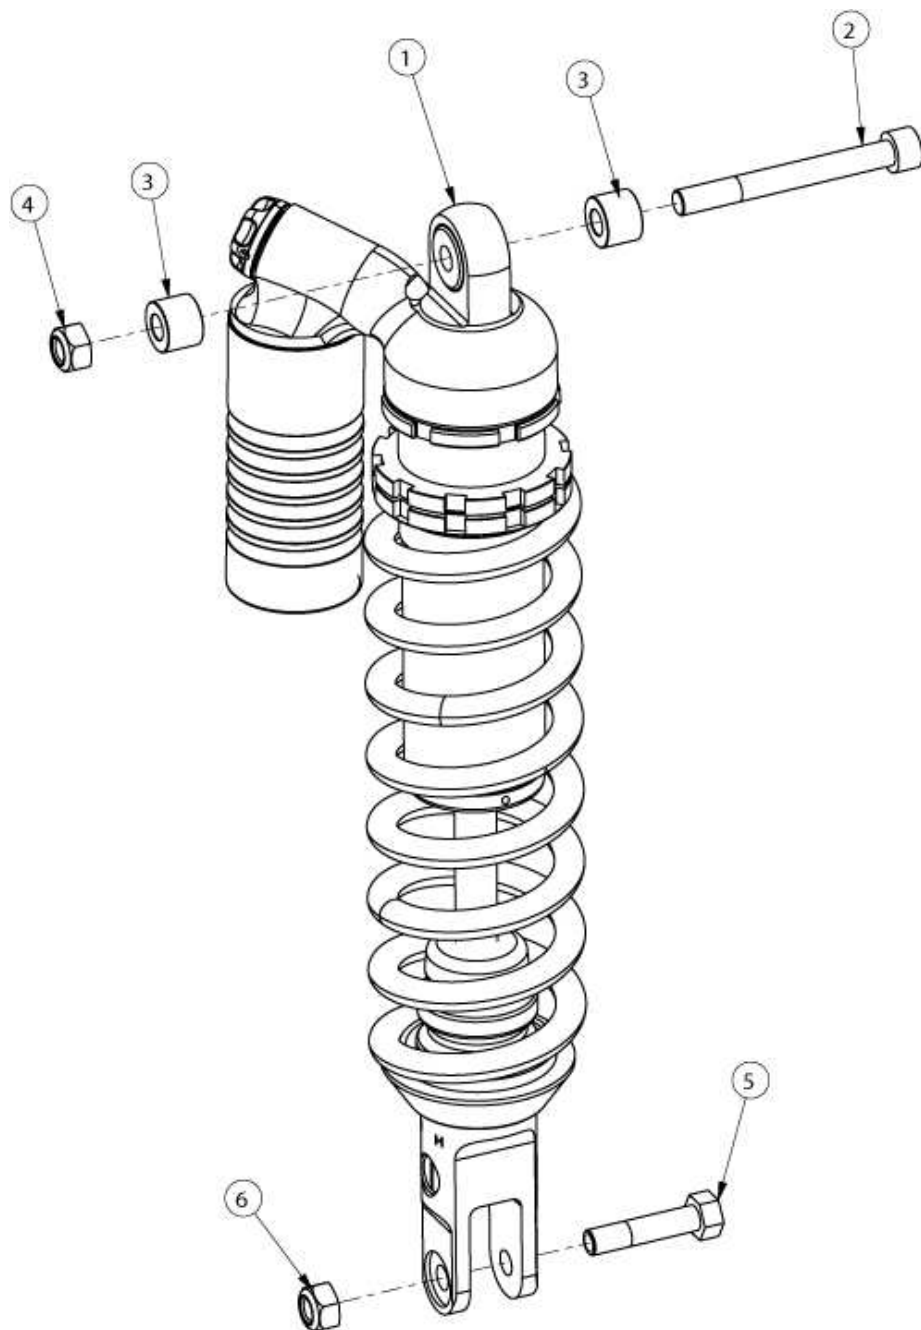

	PARTS LIST		Ref:	PL27EN
	REAR SHOCK ABSORBER		Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00STC01A0074	REAR SHOCK ABSORBER (ZF SACHS)	1	
2	PF0912010090	SCREW DIN912 M10X90	1	
3	00STS07A0075	SPACER (15mm)	2	
4	PC0985010000	NUT DIN985 M10	1	
5	00STS07A0076	SCREW M10X43	1	
6	PC0934010000	NUT DIN934 M10	1	

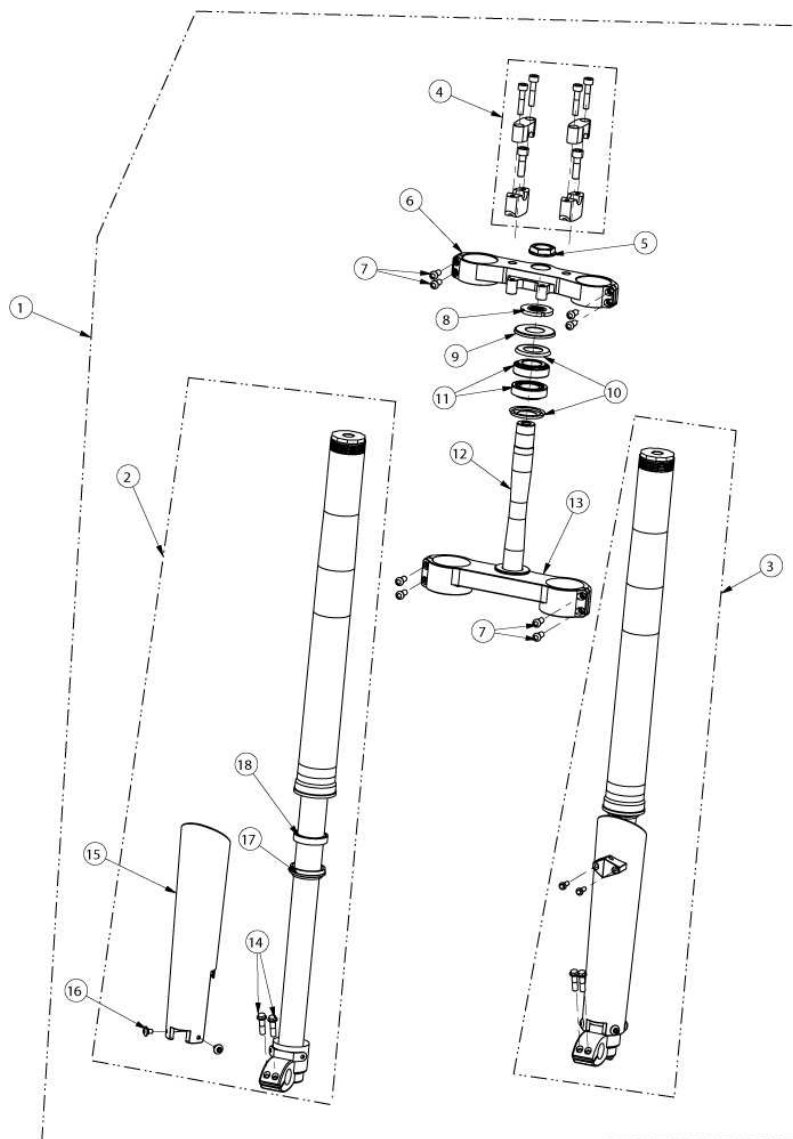

	PARTS LIST		Ref:	PL28EN
			Model:	PR5
	FRONT SUSPENSION		Date:	February 2011
			Edition:	2nd
Item	PART NUMBER	DESCRIPTION	Qt.	
1	00SFC01A0058	FRONT FORK ASSEMBLY	1	
2	00SFS01A0059	FORK LEG ASSEMBLY LH	1	
3	00SFS01A0060	FORK LEG ASSEMBLY RH	1	
4	00SFS01A0061	HANDLE BAR ASSEMBLY	1	
5	00SFS01A0006	NUT M28X1	1	
6	00SFS01A0062	UPPER BRACKET	1	
7	PF73800080200	MACHINED SCREW DIN7380 M8X20	4	
8	00SFS01A0063	STEERING NUT (N28X1)	1	
9	00SFS01A0064	SEAL COVER	1	
10	00SFS01A0065	UPPER/LOWER STEER SEAL	2	
	00SFS01A0022	LOWER DUST GASKET (30x55,2x2)	1	
11	RL00032006JR	BEARING 32006JR	2	
	RL00060062RS	BEARING 6006/2RS	1	
12	00SFS01A0066	STEERING STEM	1	
13	00SFS01A0067	LOWER BRACKET	1	
14	PF6912006030	SCREW M6X30	4	
15	00SFS01A0068	FORK PROTECTOR SET	1	
16	00SFS01A0055	FORK PROTECTOR SCREW	6	
17	00SFS01A0069	DUST SEAL	2	
18	00SFS01A0070	OIL SEAL	2	





PARTS LIST

FRONT WHEEL


Ref:	PL29EN
Model:	PR5
Date:	February 2011
Edition:	2nd

ITEM	PART NUMBER	DESCRIPTION	Qt.
1	00RFC01A0053	FRONT WHEEL EN	1
	00RFC01A0059	FRONT WHEEL SM	1
2	00RFS01A0058	HUB	1
3	00RFS01A0052	FRONT BRAKE DISC 260mm	1
4	PF7991006016	SCREW DIN7991 M6X16	6
5	00RFS05A0055	FRONT AXLE LH	1
6	00RFS01A0057	DUST SEAL 25X42X7	2
7	RL00060042RS	BEARING 6004 2RS	2
8	00RFS05A0054	FRONT AXLE RH	1
9	00RFS01A0014	SPOKE EN 21" 243 X 3.5	36
	00RFS01A0013	SPOKE SM 17" 184 X 3.5	36
10	00RFS01A0051	SPOKE NUT 3,5	36
11	00RFS01A0056	RIM EN BLACK 1,60"X21"	1
	00RFS01A0060	RIM SM BLACK 2,50"X17"	1
12	00RFS01A0002	TIRE MICHELIN EN 90/90-21"	1
	00RFS01A0003	TIRE MICHELIN SM 100/80-17"	1
13	00RFS01A0005	INNER TUBE EN	1
	00RFS01A0006	INNER TUBE SM	1
14	00RFS01A0023	WHEEL RIM TAPE 21"	1
	00RFS01A0046	WHEEL RIM TAPE 1.35/1.85x17"	1
15	00RFS01A0042	FRONT DISC MAGNET	1
16	00RFS01A0061	FRONT TIRE FIXATION (RACING)	1

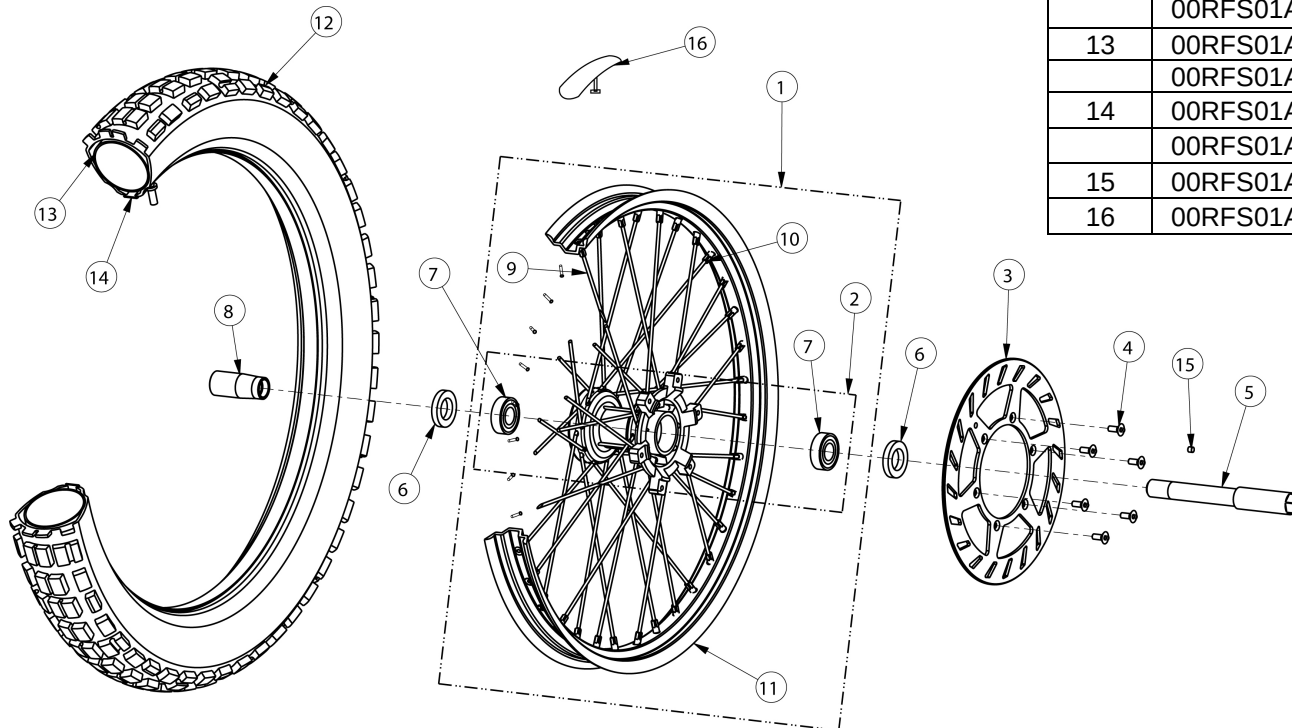


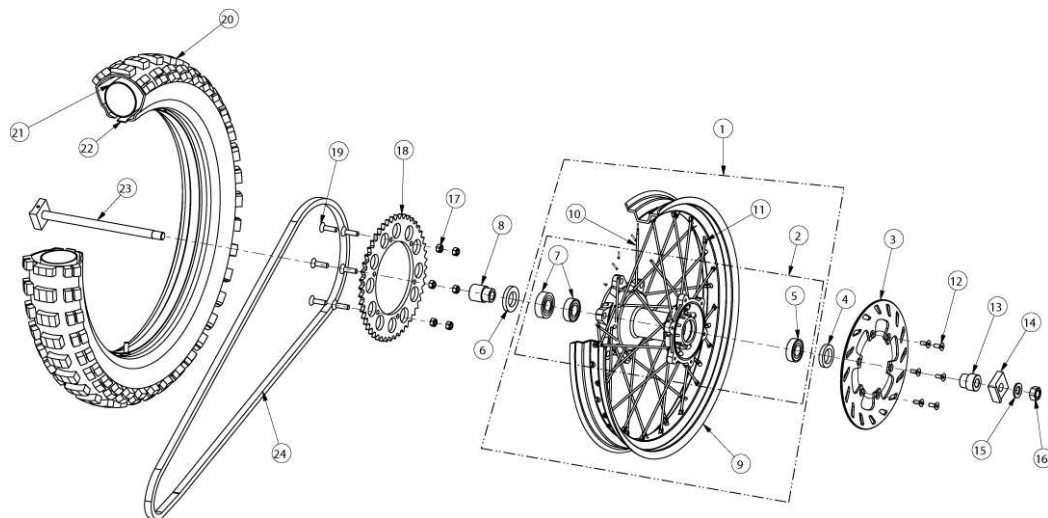

		PARTS LIST		Ref:	PL30EN
		REAR WHEEL		Model:	PR5
				Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	00RTC01A0068	REAR WHEEL EN			1
	00RTC01A0075	REAR WHEEL SM			1
2	00RTS01A0073	HUB			1
3	00RTS01A0067	REAR BRAKE DISC 240 mm			1
4	00RTS01A0024	DUST SEAL 28X42X7			1
5	RL00060042RS	BEARING 6004 2RS			1
6	00RTS01A0022	DUST SEAL 28X47X7			1
7	RL00062042RS	BEARING 6204 2RS			2
8	00RTS07A0071	SPACER LH 25mm			1
9	00RTS01A0074	WHEEL RIM BLACK EN 2,15X18			1
	00RTS01A0076	WHEEL RIM BLACK SM 3,50X17			1
10	00RTS01A0013	SPOKE EN LH 186X4			18
	00RTS01A0079	SPOKE EN RH 192X4			18
	00RTS01A0015	SPOKE SM LH 170X4			18
	00RTS01A0016	SPOKE SM RH 174X4			18
11	00RTS01A0048	SPOKE NUT 4 mm			36
12	PF7991006016	SCREW DIN7991 M6X16			6
13	00RTS07A0072	SPACER RH 16mm			1
14	00RTS02A0042	CHAIN ADJUSTER RH			1
15	AN125A014000	WASHER DIN125A M14			1
16	PC0934014000	NUT DIN934 M14			1
17	PC0985008000	NUT DIN985 M8			6
18	00RTS01A0066	SPROCKET Z48			1
	00RTS01A0077	SPROCKET Z46			1
	00RTS01A0078	SPROCKET Z50			1
19	PF7991008030	SCREW DIN7991 M8X30			6
20	00RTS01A0002	TIRE MICHELIN EN 120/90-18			1
	00RTS01A0003	TIRE MICHELIN SM 130/70-17			1
21	00RTS01A0005	INNER TUBE EN			1
	00RTS01A0006	INNER TUBE SM			1
22	00RTS01A0025	WHEEL RIM TAPE 1.60/2.00X18"			1
	00RTS01A0060	WHEEL RIM TAPE 2.15/3.00X17"			1
23	00RTS01A0070	REAR SHAFT			1
24	00RTS01A0069	CHAIN 520H - 112L			1
	00RTS01A0087	CHAIN 520H - 110L SM			1
25	00RTS01A0080	FRONT TIRE FIXATION (RACING)			1

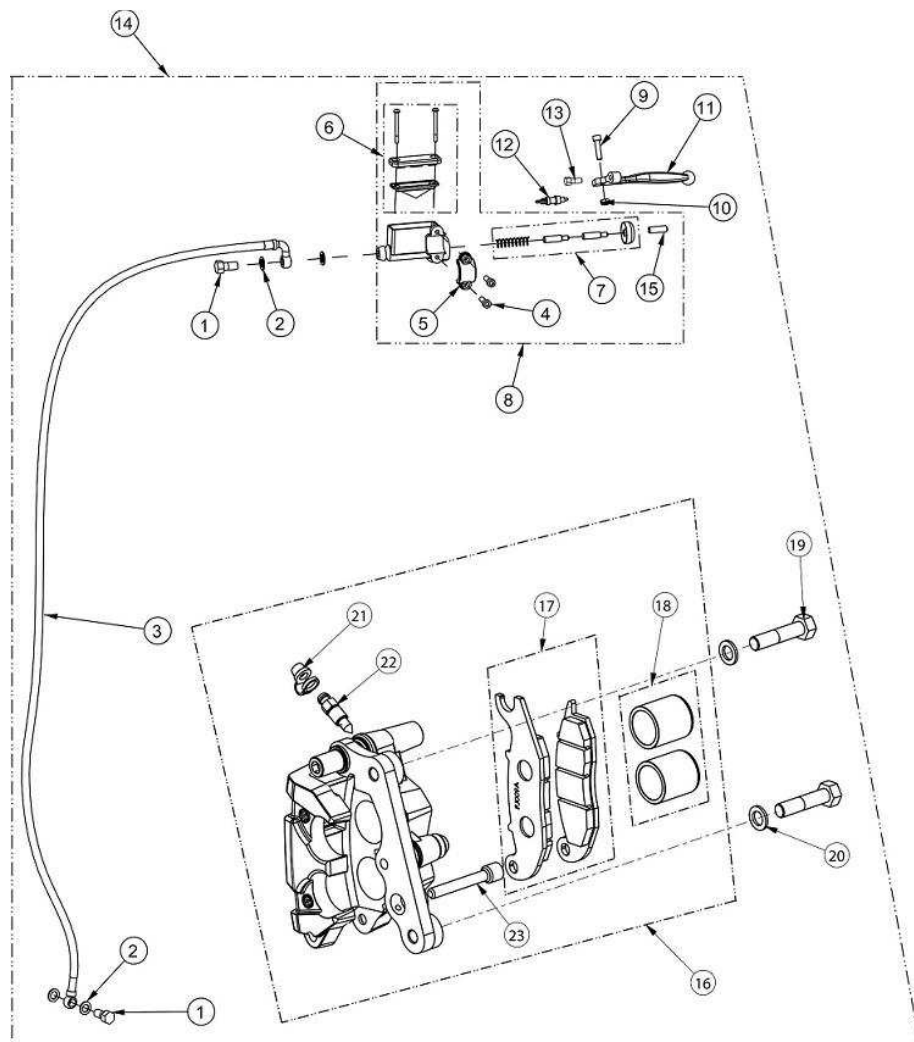


AJP	PARTS LIST		Ref:	PL31EN
	FRONT MASTER CYLINDER		Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00TRS01A0011	SCREW M10X21	2	
2	00TRS01A0012	WASHER M10	4	
3	00TRS01A0083	FRONT BRAKE HOSE	1	
4	PF0912006020	SCREW DIN912 M6X20	2	
5	00TRS01A0009	HOLDER	1	
6	00TRS01B0010	DIAPHRAGM SET	1	
7	00TRS01B0013	PISTON & CUP SET	1	
8	00TRS01B0008	MASTER CYLINDER ASSEMBLY	1	
9	00TRS01A0078	SCREW DIN912 M6X25	1	
10	PC0985006000	NUT DIN985 M6	1	
11	00TRS01B0001	BRAKE LEVER	1	
12	00TRS01A0038	STOP VALVE	1	
13	00TRS01A0062	ADJUST SCREW	1	
14	00TRC01A0089	FRONT BRAKE ASSEMBLY	1	
15	00TRC01A0055	FRONT BRAKE IMPELLER SET	1	
16	00TRC01A0078	FRONT CALIPER ASSEMBLY	1	
17	00TRC01A0074	FRONT PAD SET	1	
18	00TRS01A0079	PISTON SET	1	
19	PF0933008035	SCREW DIN933 M8x35	2	
20	AN0127008000	WASHER M8	2	
21	00TRS01B0021	BLEEDER COVER WITH RING	1	
22	00TRS01A0086	BLEEDER SCREW	1	
23	00TRS01A0085	FRONT PAD FIXATION SCREW	1	

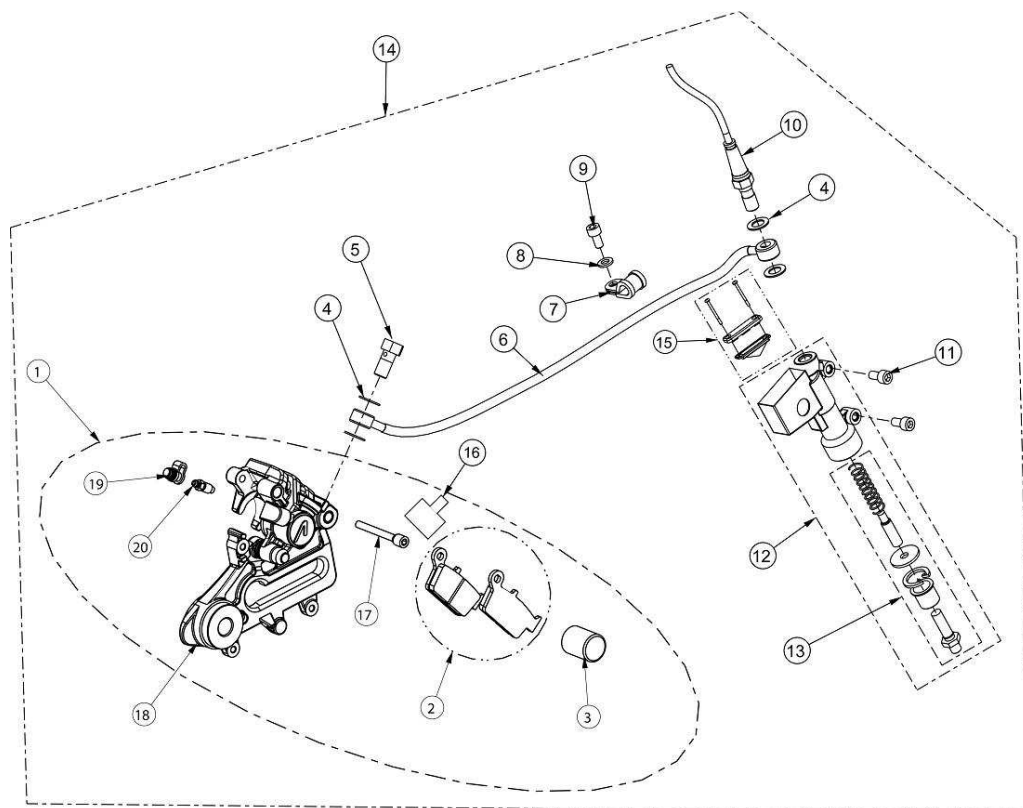


	PARTS LIST		Ref:	PL32EN
			Model:	PR5
	REAR BRAKE		Date:	February 2011
			Edition:	2nd
Item	REFERENCE	DESCRIPTION	Qt.	
1	00TRC01A0080	REAR BRAKE CALIPER ASSEMBLY	1	
2	00TRS01A0075	PAD SET	1	
3	00TRS01A0081	PISTON SET	1	
4	00TRS01A0012	SEALING WASHER 10mm	4	
5	00TRS01A0011	SCREW M10X21	1	
6	00TRS01A0082	REAR BRAKE HOSE 632mm	1	
7	00TRS01A0037	HOLDER	1	
8	AN125A006000	WASHER DIN125A M6	1	
9	PF7380006012	SCREW ISO7380 M6X12	1	
10	00TRS01A0039	STOP SWITCH	1	
11	PF7380006020	SCREW ISO7380 M6X20	2	
12	00TRC01A0051	REAR MASTER CYLINDER	1	
13	00TRS01A0052	PISTON & CUP SET	1	
14	00TRS01A0090	REAR BRAKE CALIPER COMPLETE	1	
15	00TRS01A0053	DIAPHRAGM SET	1	
16	00TRS01A0092	PAD PROTECTION PLATE	1	
17	00TRS01A0093	PAD FIXATION SCREW	1	
18	00TRS01A0091	REAR BRAKE CALIPER	1	
19	00TRS01B0002	BLEEDER COVER	1	
20	00TRS01A0086	BLEEDER SCREW	1	


	PARTS LIST		Ref:	PL33EN
			Model:	PR5
	REAR BRAKE PEDAL		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00TRS07A0076	REAR BRAKE PEDAL	1	
2	00TRS06A0005	PUSH ROD	1	
3	PF7380008050	SCREW ISO7380 M8X50	1	
4	00TRS07A0049	WASHER 5/16	2	
5	00TRS07A0077	SPACER	1	
6	PC0985008000	NUT DIN985 M8	2	

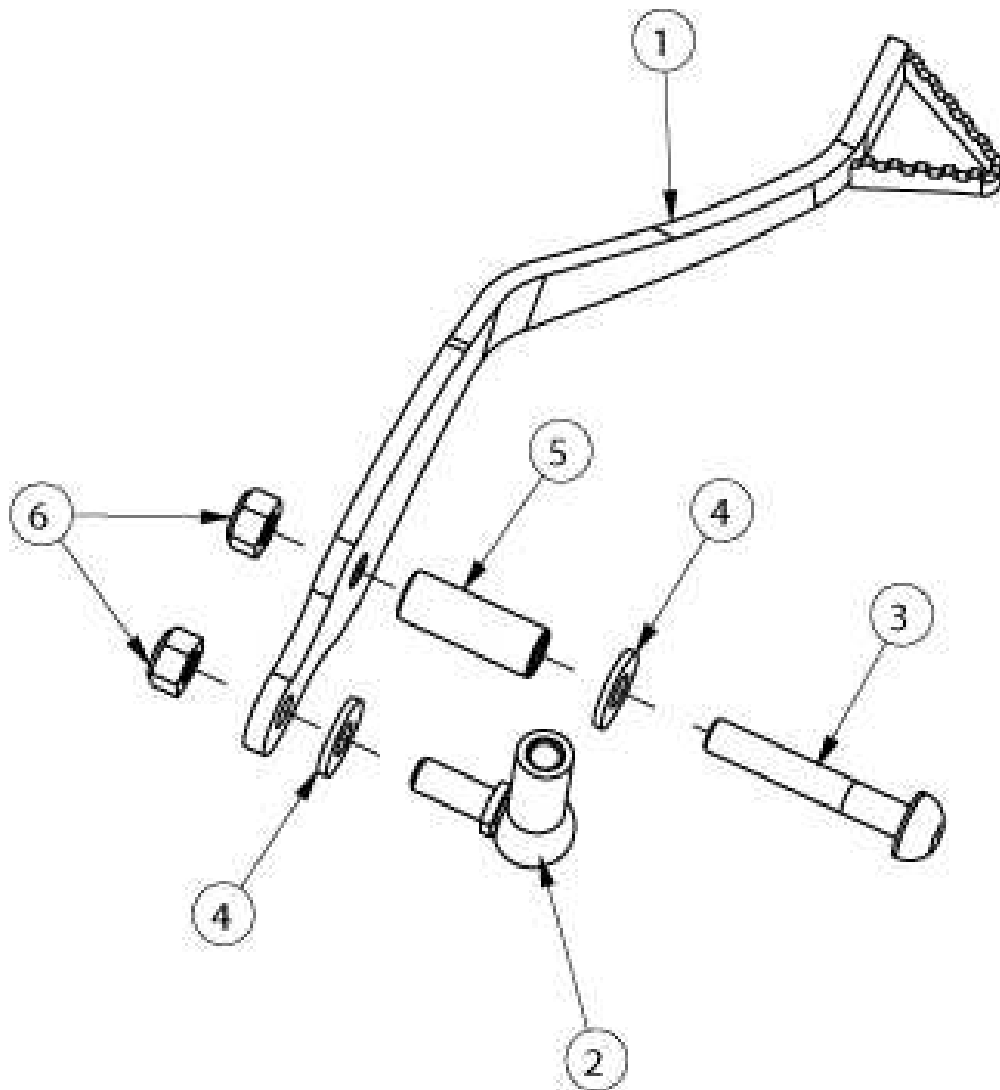


	PARTS LIST		Ref ^a :	PL34EN
			Model:	PR5
	HANDLEBAR		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00COS01A0032	THROTTLE CABLE	1	
2	00COS01A0033	CLUTCH CABLE	1	
3	00COS01A0034	HANDLEBAR	1	
4	00COS01A0021	REAR VIEW MIRROR	2	
5	00PLS01A0073	WHITE HAND GARDS SET	1	

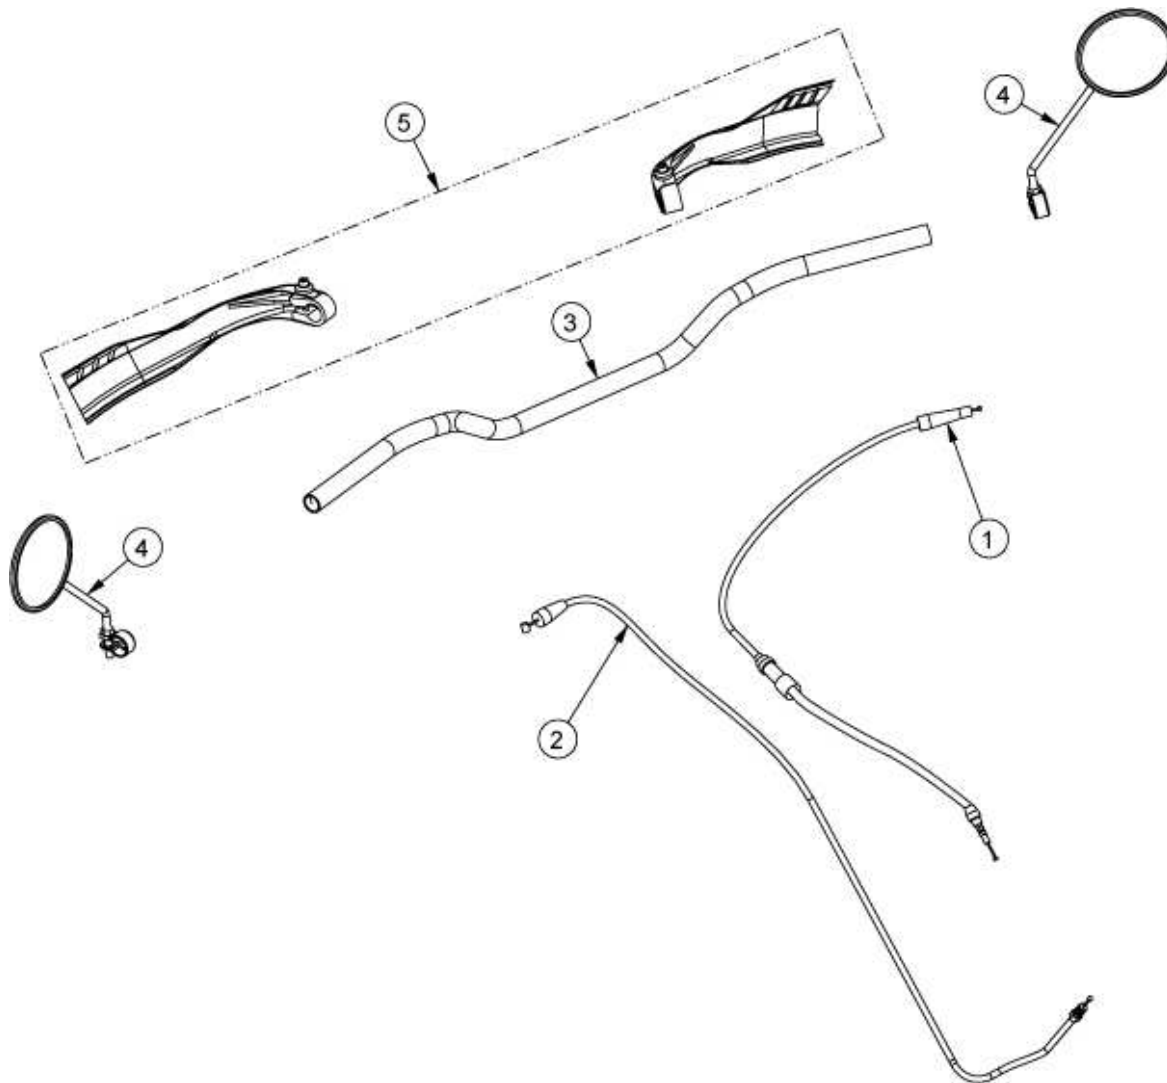


	PARTS LIST		Ref:	PL35EN
			Model:	PR5
	MAIN CONTROLS		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00COC01B0003	SET OF GRIPS	1	
2	00COS01A0038	THROTTLE TUBE	1	
3	00COS01A0004	INSERT	1	
4	00COS01A0002	CLUTCH LEVER	1	
5	00ELC01A0003	LIGHTS SWITCH	1	
6	00COC01A0002	THROTTLE CONTROL ASSEMBLY	1	
7	00COC01A0001	CLUTCH LEVER ASSEMBLY	1	
8	00COS01A0027	CLUTCH LEVER BRACKET	1	
9	00COS01A0029	STARTING BUTTON	1	
10	00COS01A0036	THROTTLE STOPPER	1	
	PF0912006020	SCREW DIN912 M6X20	2	
11	00COS01A0028	CLUTCH CABLE TUNNER	1	
12	00COS01A0037	THROTTLE CABLE TUNNER	1	
13	00COS01A0035	CLUTCH LEVER CLAMP	1	
14	PF0912006020	SCREW DIN912 M6X20	2	

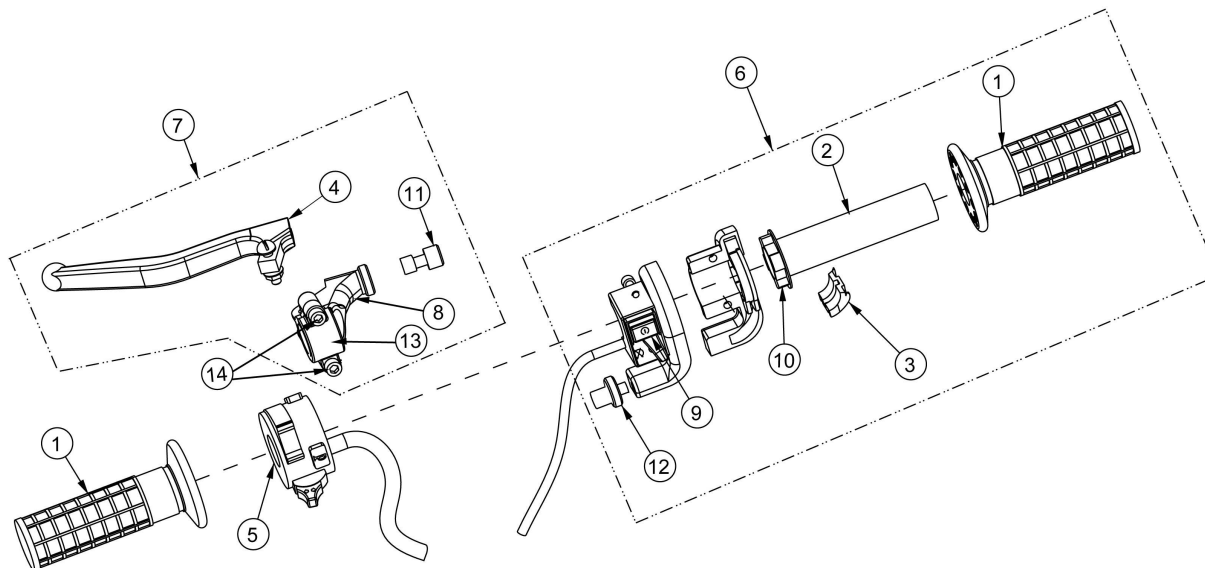

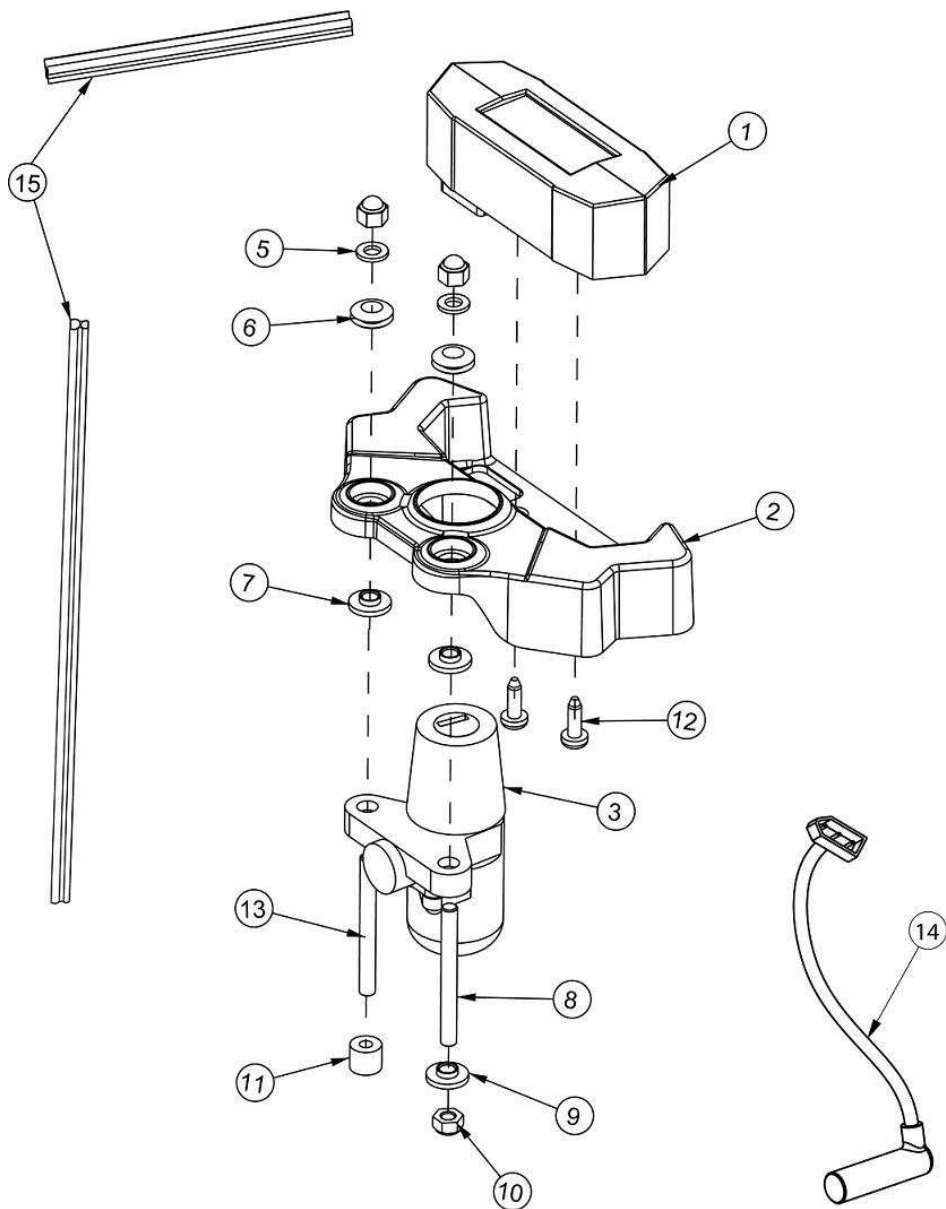


		PARTS LIST		Ref:	PL36EN
				Model:	PR5
		COCKPIT		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	00ELS01A0036	SPEEDOMETER			1
2	00ELS01A0035	SPEEDOMETER COVER			1
3	00COS01A0018	IGNITION SWITCH / STEER LOCK			1
4	PC1587006000	NUT DIN1587 M6			2
5	AN125A006000	WASHER DIN125A M6			2
6	00COS01A0016	CUSHION			2
7	00COS07A0030	COCKPIT SPACER			2
8	00COS01A0024	STUD M6X50			1
9	00COS07A0015	SPACER 16X4.4X6			1
10	PC0985006000	NUT DIN985 M6			1
11	00COS07A0023	NUT M6 FUSE			1
12	PFCH88H4213	SCREW DIN CH88H M4.2X13			2
13	00COS01A0022	STUD M6X60			1
14	00ELS01A0038	SPEEDOMETER SENSOR			1
15	00TRS01A0088	SENSOR CABLE HOSE KIT			1

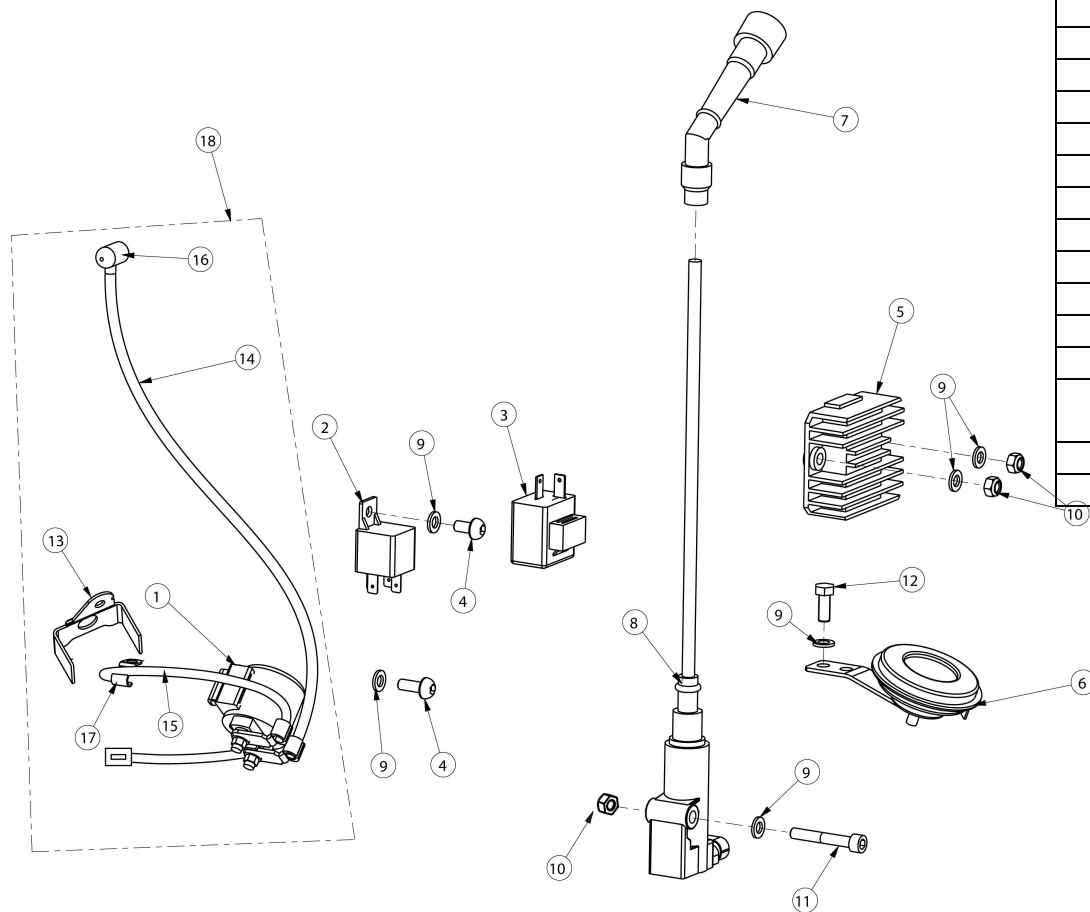


	PARTS LIST		Ref:	PL37EN
	ELECTRICAL SYSTEM		Model:	PR5
			Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	82290I049010216	STARTER RELAY	1	
2	00ELS01A0041	INJECTION RELAY	1	
3	00ELS01A0006	TURN SIGNAL RELAY	1	
4	PF7380006012	SCREW ISO7380 M6X12	2	
5	00ELS01A0042	RECTIFIER	1	
6	00ELS01A0005	HORN	1	
7	00ELS01A0044	SPARK PLUG CONNECTOR	1	
8	00ELS01A0043	IGNITION COIL	1	
9	AN125A006000	WASHER DIN125A M6	6	
10	PC0985006000	NUT DIN985 M6	3	
11	PF0912006040	SCREW DIN912 M6X40	1	
12	PF0933006012	SCREW DIN933 M6X12	1	
13	00ELS07A0053	STARTER RELAY BRACKET	1	
14	82231I0490000	STARTER MOTOR CABLE 530 mm	1	
15	00ELS01A0054	BATTERY CABLE 250mm	1	
16	82233I0490000	STARTER CABLE TERMINAL PROTECCION	2	
17	00ELS01A0056	BATTERY TERMINAL PROTECTION	1	
18	00ELC01A0052	COMPLETE STARTER ASSEMBLY	1	


	PARTS LIST		Ref:	PL38EN
			Model:	PR5
	WIRING HARNESS		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00ELS01A0049	ELECTRICAL SYSTEM HARNESS	1	
2	00ELS01A0050	INJECTION SYSTEM HARNESS	1	
3	00ELS01A0037	MAIN CONTROL HARNESS	1	
4	00ELS01A0051	GROUND CONNECTION CABLE (250mm)	1	
5	00ELS01A0047	FUSE 15A	2	
6	00ELS01A0017	FUSE 20A	1	
7	00ELS01B0018	FUSE HOLDER	1	
8	00ELS01A0021	BLINKER HARNESS	1	

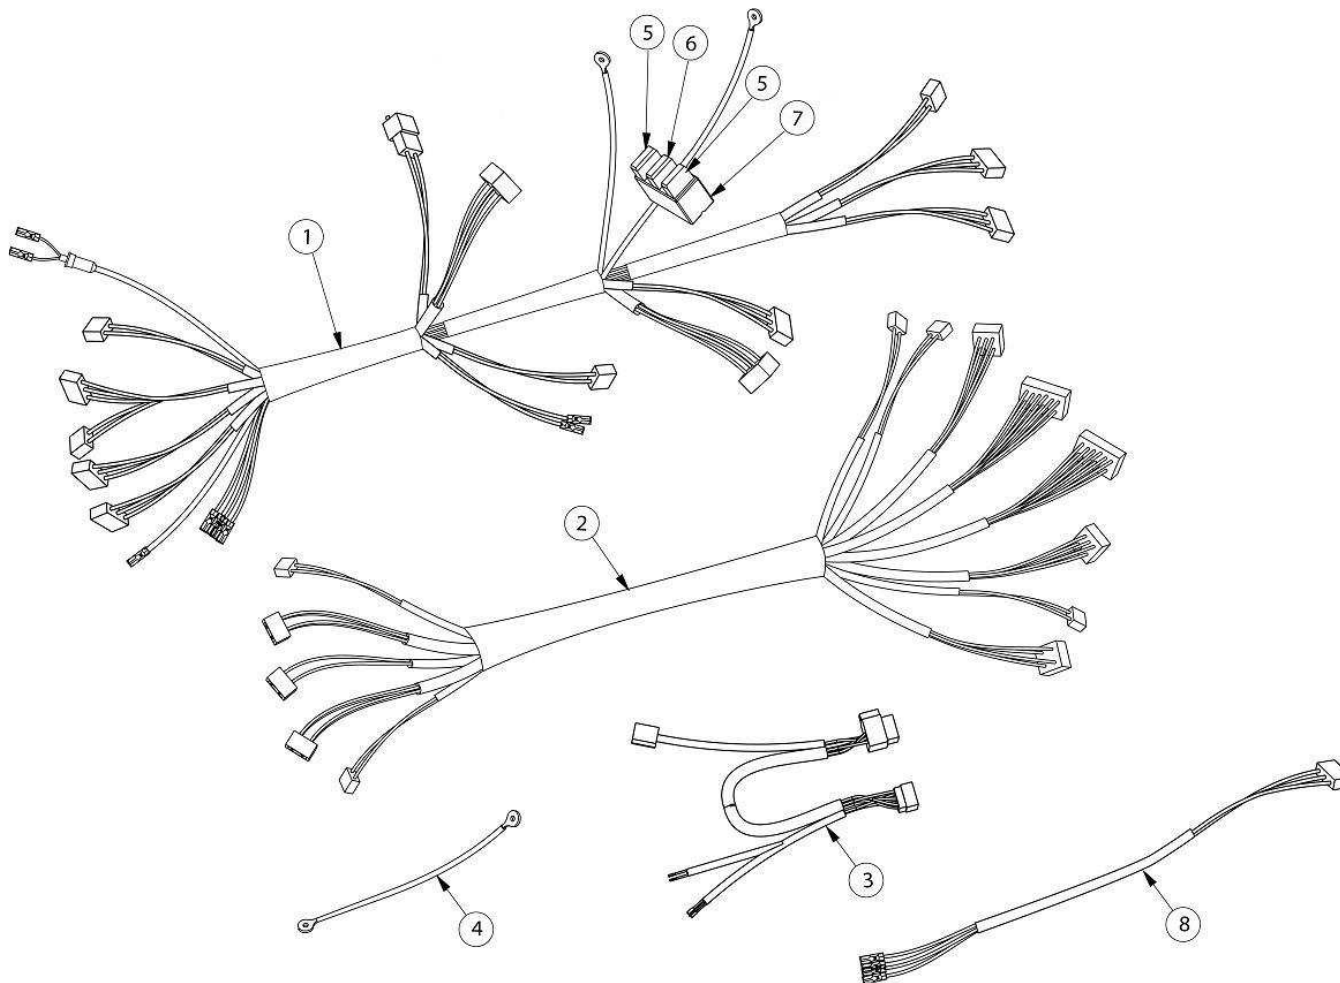


	PARTS LIST		Ref:	PL39EN
			Model:	PR5
	BATTERY		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00ELS04A0040	BATTERY HOLDER	1	
2	00ELS01A0039	BATTERY YTZ7-S (12V 6AH)	1	
3	00ELS01A0004	BAND	1	
4	PF0933006012	SCREW DIN933 M6X12	1	
5	PF7991006016	SCREW DIN7991 M6X16	1	
6	PC0985006000	NUT DIN985 M6	1	

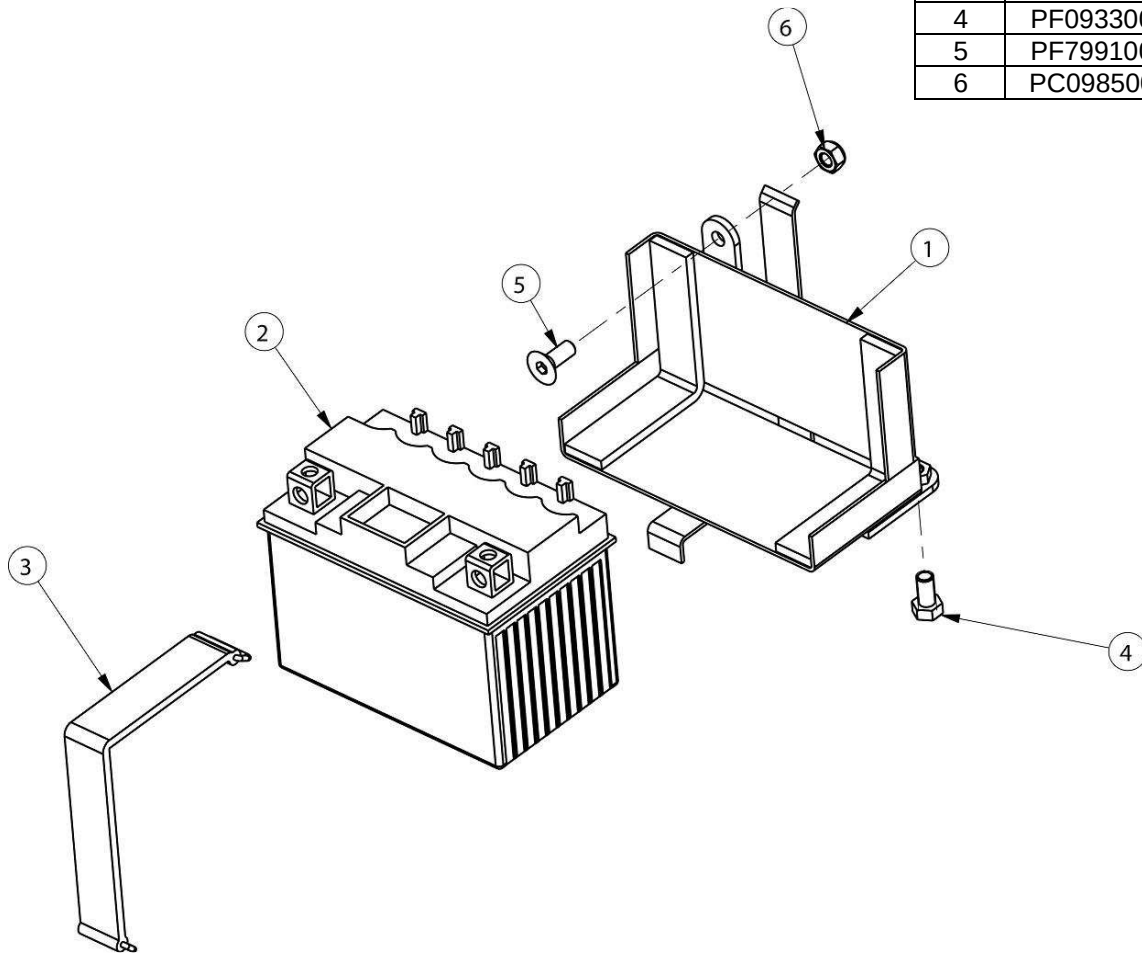


		PARTS LIST		Ref:	PL40EN
				Model:	PR5
		TURN SIGNAL		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	00ELC01A0002	TURN LAMP ASSEMBLY LH			2
2	00ELC01A0001	TURN LAMP ASSEMBLY RH			2
3	PF7380006016	SCREW ISO7380 M6X16			4
4	AN125A006000	WASHER DIN125A M6			4
5	PC0985006000	NUT DIN985 M6			4
6	00ELS01A0013	BLINKER GLASS			4
7	00ELS01A0015	LAMP 12V 10W			4
8	00ELS01A0014	TURN SIGN INNER GLASS			4
9	PF7981002813	SCREW 2,8x13			4

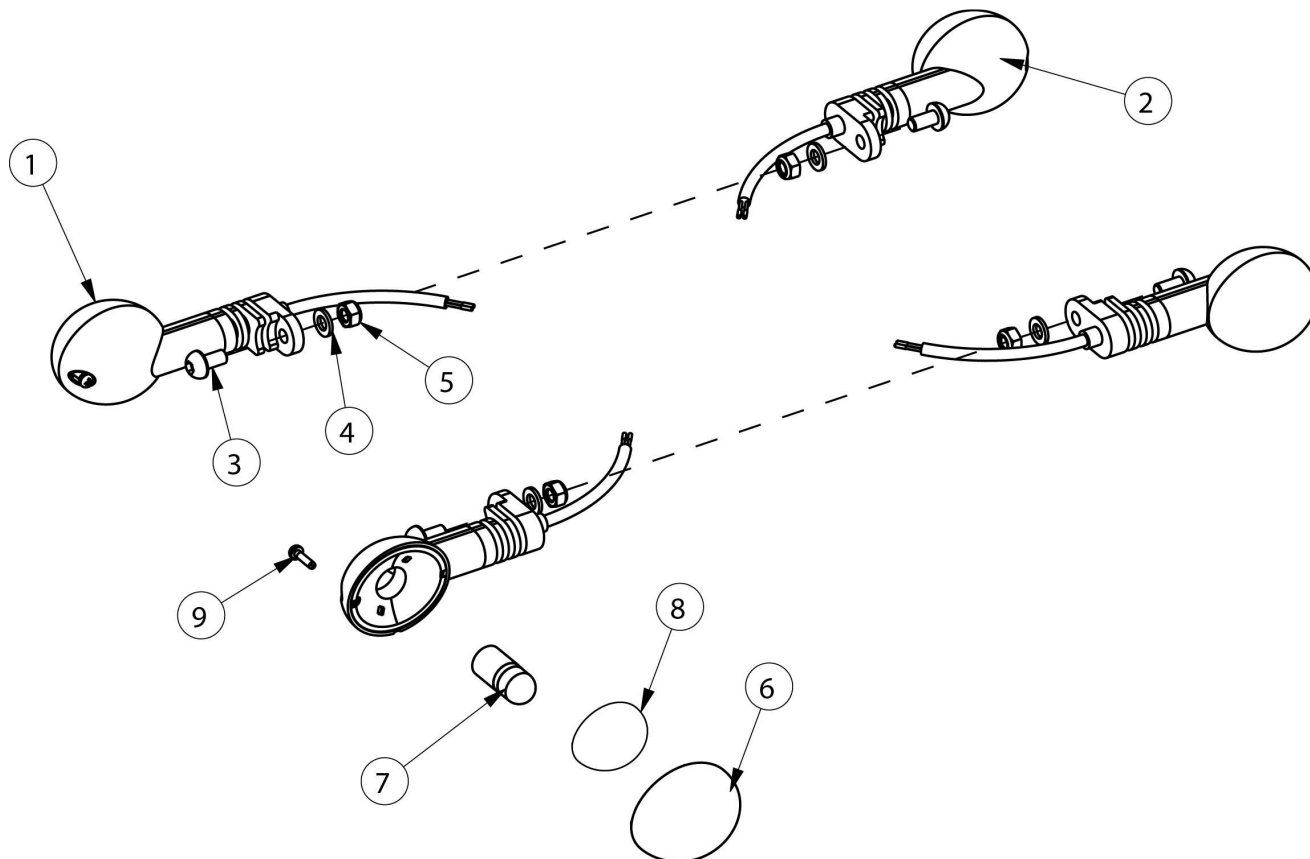

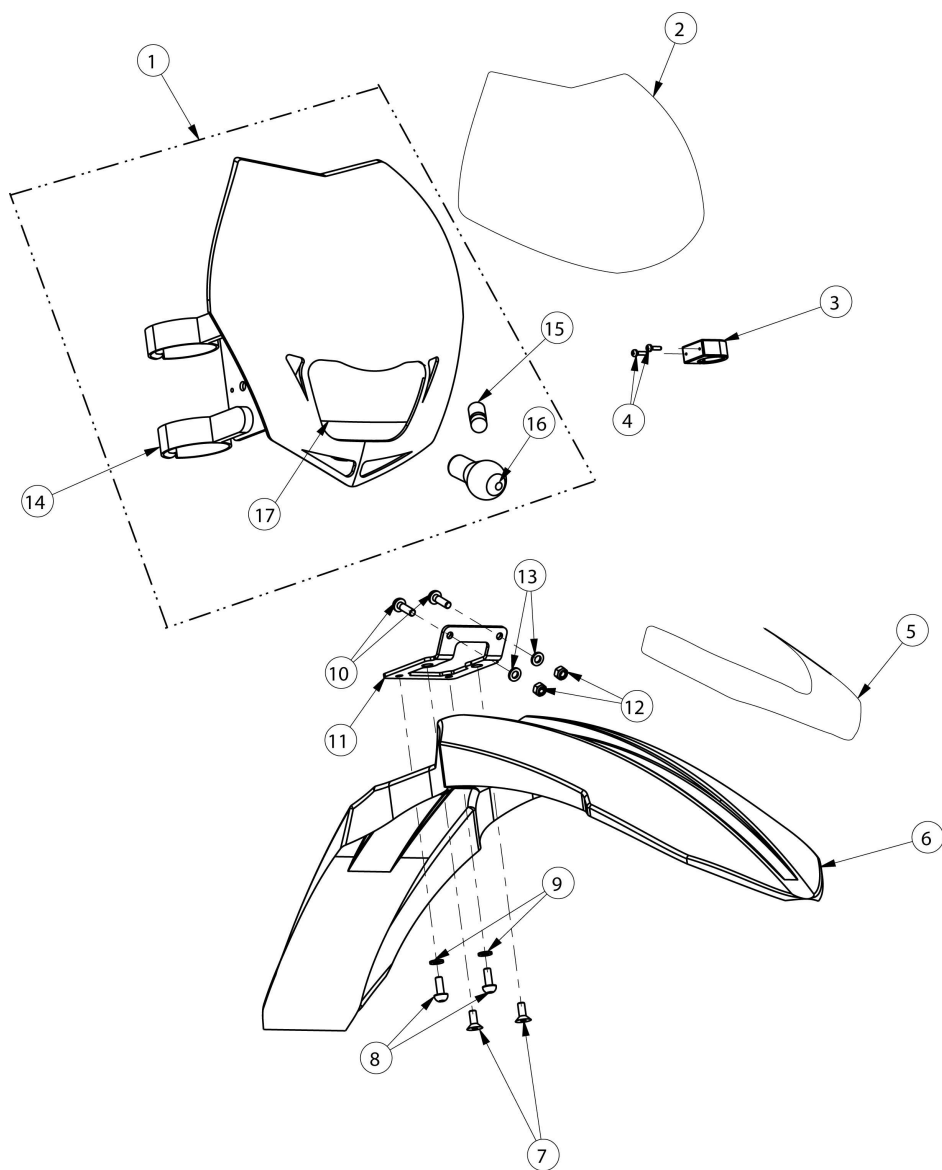

		PARTS LIST		Ref:	PL41EN
				Model:	PR5
		FRONT PLASTICS		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt
1	00PLC01A0071	HEAD LAMP ASSEMBLY			1
2	00BAS01A0089	HEAD LAMP STICKER			1
3	00PLS01A0042	HOLDER			1
4	PF7981003513	HOLDER SCREW 3,5			2
5	00BAS01A0090	FRONT FENDER STICKER			1
6	00PLS01A0076	FRONT FENDER			1
7	PF7991006016	SCREW DIN7991 M6X16			2
8	PF0912006020	SCREW DIN912 M6X20			2
9	AN9021006000	WASHER DIN9021 M6			2
10	PF7380006016	SCREW ISO7380 M6X16			2
11	00PLS07A0081	FRONT FENDER BRACKET			1
12	PC0985006000	NUT DIN985 M6			2
13	AN9021006000	WASHER DIN9021 M6			2
14	00PLS01A0007	HEADLIGHT RUBBER CLAMP			4
15	00ELS01A0029	LAMP 12V 4W			1
16	00ELS01A0030	LAMP 12V 35/35W B20			1
17	00ELC01A0028	HEADLIGHT GLASS			1

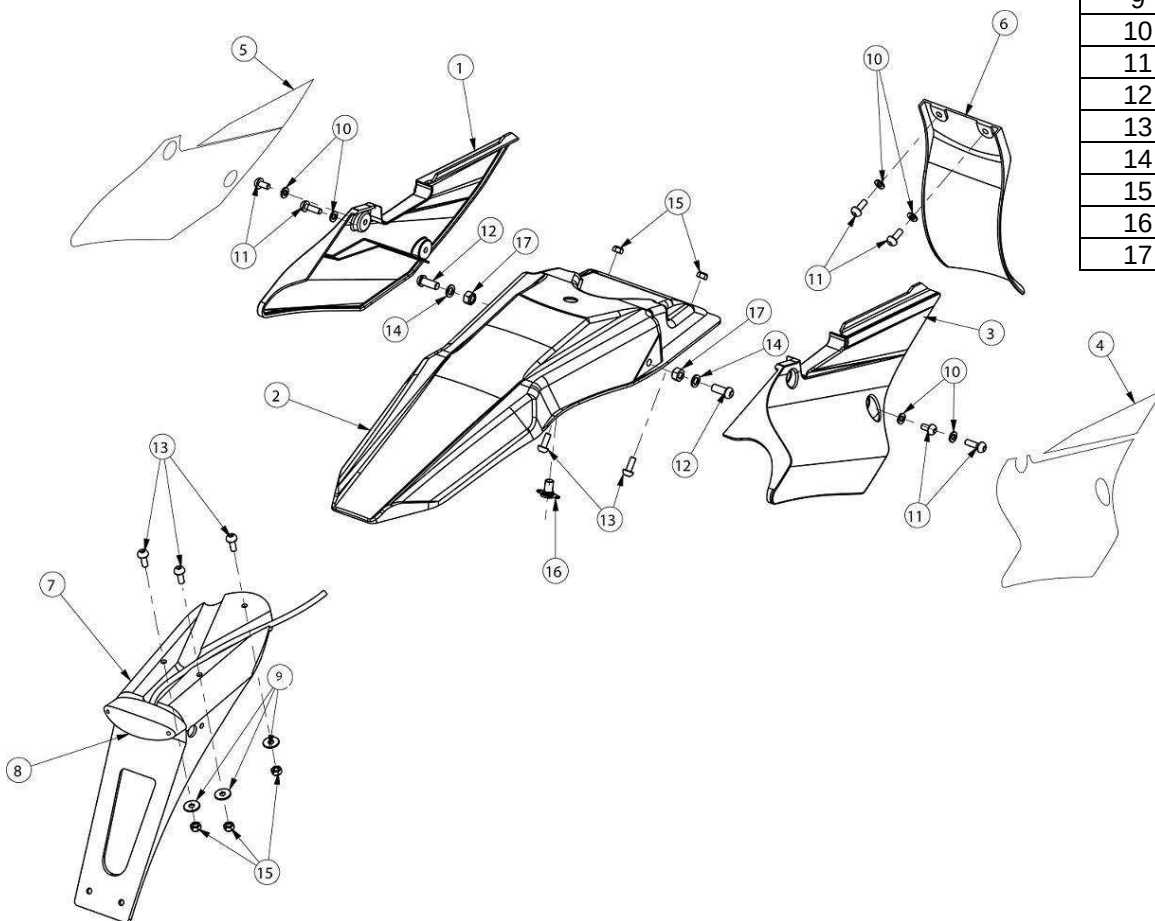

	PARTS LIST		Ref:	PL42EN
			Modele:	PR5
	REAR FENDER		Date:	February 2011
			Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION	Qt.	
1	00PLS01A0082	FRAME COVER LH	1	
2	00PLS01A0064	REAR FENDER	1	
3	00PLS01A0083	FRAME COVER RH	1	
4	00BAS01A0092	FRAME COVER STICKER RH	1	
5	00BAS01A0091	FRAME COVER STICKER LH	1	
6	00PLS01A0013	MUD GARD	1	
7	00PLC01A0006	REAR FENDER SPOILER	1	
8	00PLS01A0027	LED LIGHT	1	
9	AN9021006000	WASHER DIN9021 M6	3	
10	AN125A006000	WASHER DIN125A M6	6	
11	PF7380006016	SCREW ISO7380 M6X16	6	
12	PF7380008020	SCREW ISO7380 M8X20	2	
13	PF7380006016	SCREW ISO7380 M6X16	5	
14	AN125A008000	WASHER DIN125A M8	2	
15	PC0985006000	NUT DIN985 M6	5	
16	00PLS01A0084	SEAT LOCKER	1	
17	PC0985008000	NUT DIN985 M8	2	




PARTS LIST


Ref ^a :	PL43EN
Model:	PR5
Date:	February 2011
Edition:	2nd

FRAME COVER

ITEM	PART NUMBER	DESCRIPTION	Qt.
1	00PLS01A0079	FRONT COVER RH	1
	00PLC01A0087	FRONT COVER RH WITH STICKER	1
2	00PLS01A0080	FRONT COVER LH	1
	00PLC01A0088	FRONT COVER LH WITH STICKER	1
3	00PLS01A0078	FRONT FRAME COVER RH	1
4	00BAS01A0088	FRONT COVER STICKER LH	1
5	00BAS01A0087	FRONT COVER STICKER RH	1
6	PC0985006000	NUT DIN985 M6	6
7	PF7380006016	SCREW ISO7380 M6X16	12
8	AN125A006000	WASHER DIN125A M6	6
9	00PLS01A0085	FIXING NUT M6	2
10	00PLS01A0086	FRONT FRAME COVER LH	1

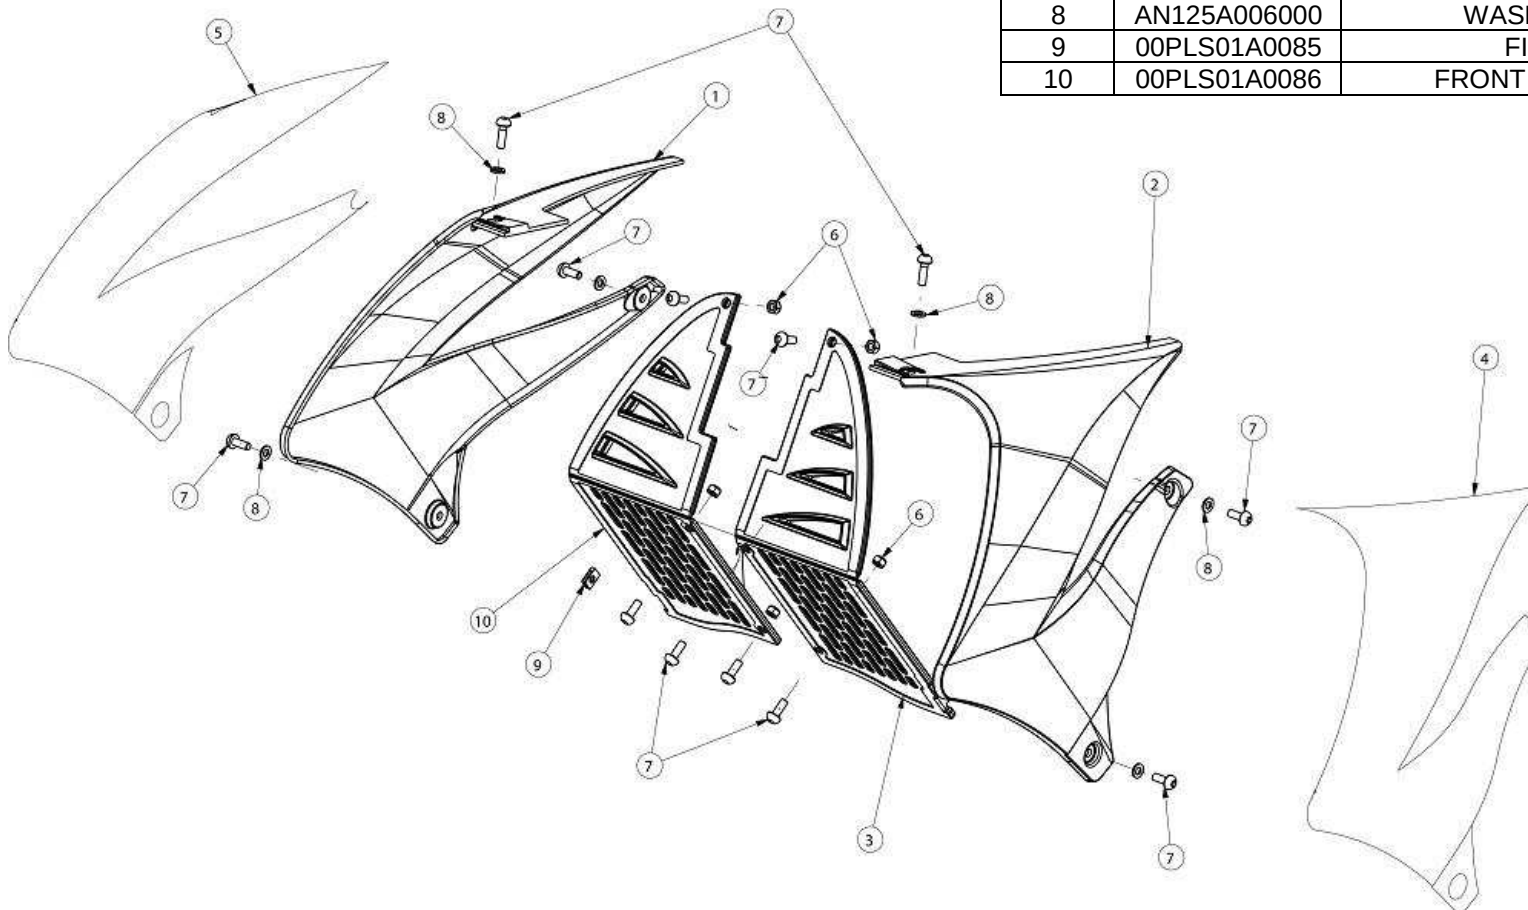

		PARTS LIST		Ref:	PL44EN
				Model:	PR5
		SEAT		Date:	February 2011
				Edition:	2nd
ITEM	PART NUMBER	DESCRIPTION			Qt.
1	00BAS01A0026	SEAT COVER			1
2	00BAC01A0086	SEAT ASSEMBLY			1

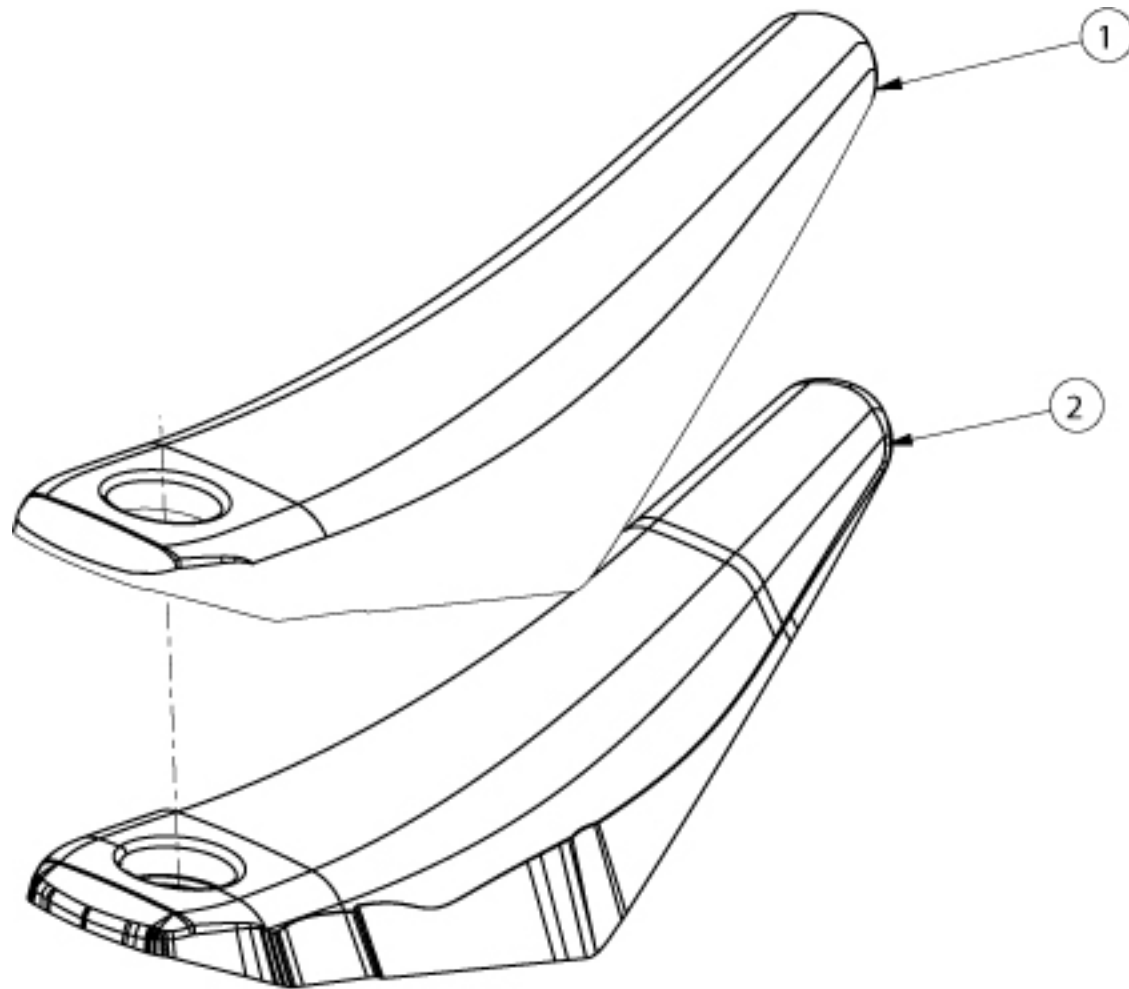

PARTS CATALOGUE

AJP PR5

2nd EDITION
FEBRUARY 2011

AJP-MOTOS, SA. All rights reserved.

The content of this document cannot be reproduced or transmitted by any way or mean, electronic or mechanic, for all purposes, without written authorization from AJP MOTOS.

AJP-MOTOS, SA
Rua de Santana, 91 - Pias
4620-501 Lousada
PORTUGAL
Tel: +351 255 815 122
Fax: +351 255 815 123
E-mail: info@ajpmotos.com
Web.: www.ajpmotos.com